



SAMSUNG

DVD-D360K
DVD-D530
DVD-D530K

DVD Player

User Manual

imagine the possibilities

Thank you for purchasing this Samsung product.

To receive more complete service, please register your product at

www.samsung.com/global/register



AK68-02046A

Downloadcenter.samsung.com/Samsung-Manuals



ENGLISH

Precautions

1. Setting up

- Refer to the identification label located on the rear of your player for its proper operating voltage.
- Install your player in a cabinet with adequate ventilation holes. (7-10cm). Do not block ventilation holes on any of the components for air circulation.
- Do not push the disc tray in by hand.
- Do not stack components.
- Be sure to turn all components off before moving the player.
- Before connecting other components to this player, be sure to turn them off.
- Be sure to remove the disc and turn off the player after use, especially if you are not going to use it for a long time.
- The mains plug is used as a disconnect device and shall stay readily operable at any time.

2. For your safety

- This product utilizes a laser. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
- Do not open covers and do not repair your self. Refer servicing to qualified personal.

3. Caution

- Your player is not intended for industrial use but for domestic purposes. Use of this product is for personal use only.
- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Exterior influences such as lightning and static electricity can affect normal operation of this player. If this occurs, turn the player off and on again with the POWER button, or disconnect and then reconnect the AC power cord to the AC power outlet. The player will operate normally.
- When condensation forms inside the player due to sharp changes in temperature,

the player may not operate correctly. If this occurs, leave the player at room temperature until the inside of the player becomes dry and operational.

4. Disc

- Do not clean disc using record-cleaning sprays, benzene, thinner, or other volatile solvents that may cause damage to the disc surface.
- Do not touch the disc's bottom. Hold by the edges or by one edge and the hole in the center.
- Wipe the dirt away gently; never wipe a cloth back and forth over the disc.

5. Environmental info

- The battery used in this product contains chemicals that are harmful to the environment.
- So, dispose the batteries in the proper manner, according to federal, state, and local regulations.

The product unit accompanied this user manual is licenced under certain intellectual property rights of certain third parties. This licence is limited to private non-commercial use by end-user consumers for licenced contents. No rights are granted for commercial use. The licence does not cover any product unit other than this product unit and the licence does not extend to any unlicensed product unit or process conforming to ISO/OUR 11172-3 or ISO/OUR 13818-3 used or sold in combination with this product unit. The licence only covers the use of this product unit to encode and/or decode audio files conforming to the ISO/OUR 11172-3 or ISO/OUR 13818-3. No rights are granted under this licence for product features or functions that do not conform to the ISO/OUR 11172-3 or ISO/OUR 13818-3.

CAUTION: USE OF ANY CONTROLS, ADJUSTMENTS, OR PROCEDURES OTHER THAN SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE

Table of contents

Precautions	2	MP3/WMA/CD Audio Playback	8
Setup		MPEG4 Playback	8
General Features	2	Playing Media Files using the USB HOST feature	9
Description	3	CD Ripping	10
Tour of the Remote Control	3	Picture CD Playback	10
Connections		Picture CD Playback for HD-JPEG (Only DVD-D530K/DVD-D530)	10
Choosing a Connection	4	Karaoke Functions	
Basic Functions		(Only DVD-D530K/D360K)	
Playing a Disc	6	Karaoke Functions	11
Using the Search and Skip Functions	6	Changing Setup Menu	
Using the Display Function	6	Using the Setup Menu	11
Using the Disc and Title Menu	6	Setting Up the Display Options	11
Repeat Play	6	Setting Up the Audio Options	12
Slow Play	7	Setting Up the System Options	12
Advanced Functions		Setting Up the Language Features	12
Adjusting the Aspect Ratio (EZ View)	7	Setting Up the Security Options	13
Selecting the Audio Language	7	Setting Up the General Options	13
Selecting the Subtitle Language	7	Setting Up the Support Options	13
Changing the Camera Angle	7	Reference	
Using the Bookmark Function	7	Troubleshooting	13
Using the Zoom Function	8	Specifications	14
Clips Menu for MP3/WMA/JPEG/MPEG4/CD Audio	8		
Folder Selection	8		

Setup

General Features

Excellent Sound

Dolby Digital, a technology developed by Dolby Laboratories, provides crystal clear sound reproduction.

Screen

Both regular and widescreen(16:9) pictures can be viewed.

Slow Motion

An important scene can be viewed in slow motion.

1080p Playback (Only DVD-D530K/DVD-D530)

This player upconverts regular DVDs for playback on 1080p TVs.

Parental Control (DVD)

The parental control allows users to set the necessary level to prohibit children from viewing harmful movies such as those with violence, adult subject matter, etc.

Various On-Screen Menu Functions

You can select various languages (Audio/Subtitle) and screen angles while enjoying movies.

Progressive Scan

Progressive scanning creates an improved picture with double the scan lines of a conventional inter-laced picture

EZ VIEW (DVD)

Easy View enables picture adjustment to match your TV's screen size (16:9 or 4:3).

Digital Photo Viewer (JPEG)

You can view Digital Photos on your TV.

Repeat

You can repeat a song or movie simply by pressing the REPEAT button

MP3/WMA

This unit can play discs contain MP3/WMA files.
MPEG4
 This unit can play MPEG4 formats within an avi file.

HDMI (High Definition Multimedia Interface) (Only DVD-D530K/DVD-D50J)

HDMI reduces picture noise by allowing a pure-digital video/audio signal path from the player to your TV.

CD Ripping

This feature lets you to copy audio files from disc to USB device into MP3 format. (Only Audio CD (CD DA)).

Note

- Discs which cannot be played with this player.
 - DVD-ROM
 - DVD-RAM
 - CD-ROM
 - CDV
 - CDI
 - CVD
- Ability to play back may depend on recording conditions.
 - DVD-R, +R
 - CD-RW
 - DVD+RW, -RW (V mode)
- The unit may not play certain CD-R, CD-RW and DVD-R due to the disc type or recording conditions.

COPY PROTECTION

Many DVD discs are encoded with copy protection. Because of this, you should only connect your DVD player directly to your TV, not to a VCR. Connecting to a VCR results in a distorted picture from copy-protected DVD discs.

This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of ROVI Corporation. Reverse engineering and disassembly are prohibited.

PROGRESSIVE SCAN OUTPUTS (576p, 720p, 1080p)

"CONSUMERS SHOULD NOTE THAT NOT ALL HIGH DEFINITION TELEVISION SETS ARE FULLY COMPATIBLE WITH THIS PRODUCT AND MAY CAUSE ARTIFACTS TO BE DISPLAYED IN THE PICTURE, IN CASE OF 576, 720, 1080 PROGRESSIVE SCAN PICTURE PROBLEMS, IT IS RECOMMENDED THAT THE USER SWITCH THE CONNECTION TO THE 'STANDARD DEFINITION' OUTPUT. IF THERE ARE QUESTIONS REGARDING YOUR TV SET COMPATIBILITY WITH THIS

MODEL 576p, 720p, 1080p DVD PLAYER, PLEASE CONTACT SAMSUNG'S CUSTOMER SERVICE CENTER."

Disc Markings

	Play Region Number
	PAL broadcast system in U.K, France, Germany, etc.
	Dolby Digital disc
	Stereo disc
	Digital Audio disc
	MP3 disc

Region Number

Both the DVD player and the discs are coded by region. These regional codes must match in order for the disc to play. If the codes do not match, the disc will not play.

The Region Number for this player is described on the rear panel of the player.

DivX Certification

DivX, DivX Certified, and associated logos are trademarks of DivXNetworks, Inc and are used under license.

"DivX Certified to play DivX video, including premium content."

Covered by one or more of the following U.S patents : 7,295,673; 7,460,668; 7,515,710; 7,519,274.

DIVX


Description

Front Panel Controls

DVD-D530




DVD-D530K
DVD-D360K

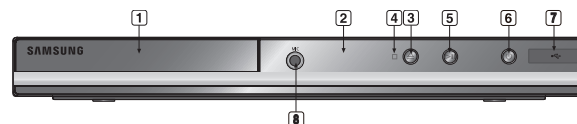


- 1. DISC TRAY**
Place the disc here.
- 2. DISPLAY**
Operation indicators are displayed here.
- 3. OPEN/CLOSE (▲)**
Press to open and close the disc tray.
- 4. STOP (■)**
Stops play.
- 5. PLAY/PAUSE (▶||)**
Play or pause the disc.
- 6. POWER ON/OFF (⏻)**
Turn on/off and the player is turned on/off.
- 7. USB HOST**
Connect digital still camera, MP3 player, memory stick, Card reader other removable storage devices.
- 8. MIC**
(Only DVD-D530K/D360K)
Connect Microphone for karaoke functions.

Tour of the Remote Control


DVD-D360K

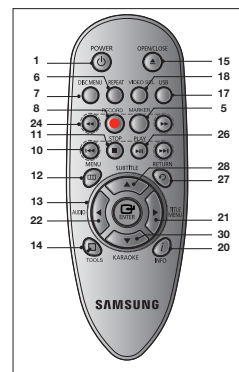

DVD-D530

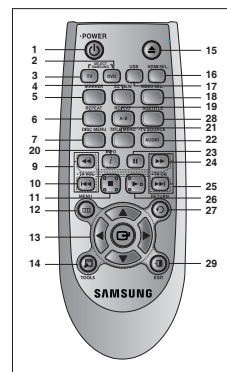

DVD-D530K

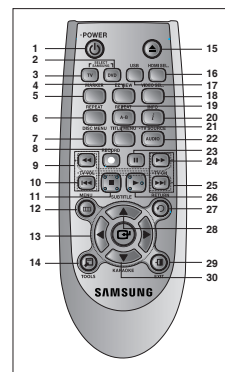

- | | |
|--|--|
| <ol style="list-style-type: none"> 1. DVD POWER Button
Turns the power on or off. 2. DVD Button
(Only DVD-D530K/D530)
Use to select the DVD player for operation. 3. TV Button
(Only DVD-D530K/D530)
Use to select a Samsung TV for operation. 4. EZ VIEW Button
(Only DVD-D530K/D530)
Lets you easily adjust the aspect ratio of a picture according to the screen size of your TV (16:9 or 4:3). 5. MARKER Button 6. REPEAT Button
Allows you to repeat play a title, chapter, track, or disc. 7. DISC MENU Button
Brings up the Disc menu. 8. RECORD Button
(Only DVD-D530K/D360K)
Use to Karaoke recording. 9. TV VOL (+, -) Buttons
(Only DVD-D530K/D530)
Controls volume. 10. SKIP Buttons (◀/▶)
Use to skip the title, chapter or track. 11. STOP Button (■) 12. MENU Button
Brings up the DVD player's menu. 13. ENTER/▲/▼, ◀/▶ Buttons
This button functions as a toggle switch. 14. TOOLS Button
Displays the current disc mode. It also lets you access the Display function. 15. OPEN/CLOSE (▲) Button
To open and close the disc tray. 16. HDMI SEL. Button | <ol style="list-style-type: none"> (Only DVD-D530K/D530)
HDMI Output resolution setup. 17. USB Button 18. VIDEO SEL. Button
Changes video output mode. 19. REPEAT A-B Button
(Only DVD-D530K/D530)
Allows you to repeat play a chosen section (A-B) on a disc. 20. INFO Button
Used to displays playback info banner. 21. TITLE MENU Button
Brings up the Title menu. 22. AUDIO/TV SOURCE Button
Use this button to access various audio functions on a disc. Use this button to select an available TV source (mode TV). 23. PAUSE Button ()
(Only DVD-D530K/D530)
Pauses disc play. 24. SEARCH Buttons (◀/▶)
Allows you to search forward/backward through a disc. 25. TV CH (⤴, ⤵) Buttons
(Only DVD-D530K/D530)
Channel selection. 26. PLAY Button (▶/▶)
Begins disc play. 27. RETURN Button
Returns to a previous menu. 28. SUBTITLE/(▲) Button 29. EXIT Button
(Only DVD-D530K/D530)
Exits the on-screen menu. 30. KARAOKE (▼) Button
(Only DVD-D530K/D360K)
To access karaoke menu (Keycon, mic volume, Echo). |
|--|--|

A. Connecting to a TV (For Video)

1. Using video/audio cables, connect the **VIDEO (yellow)/AUDIO (red and white) OUT** terminals on the rear of the DVD player to the **VIDEO (yellow)/AUDIO (red and white) IN** terminals of TV.
2. Turn on the DVD player and TV.
3. Press the input selector on your TV remote control until the Video signal from the DVD player appears on the TV screen.

Note

- Noise may be generated if the audio cable is too close to the power cable.
- If you want to connect to an Amplifier, please refer to the Amplifier connection page.
- The number and position of terminals can vary depending on your TV set. Please refer to the user's manual of the TV.
- If there is one audio input terminal on the TV, connect it to the [AUDIO OUT][left] (white) terminal of the DVD player.
- If you press the VIDEO SEL. button when DVD Player is in stop mode or no disc is inserted, the Video Output mode changes in the following sequence: (I-SCAN → P-SCAN)

B. Connection to a TV (Interlace/Progressive)

1. Using component video cables, connect the **COMPONENT VIDEO OUT** terminal on the rear of the DVD player to the **COMPONENT IN** terminal of TV.
2. Using the audio cables, connect the **AUDIO (red and white) OUT** terminals on the rear of the DVD player to the **AUDIO (red and white) IN** terminals of TV. Turn on the DVD player and TV.
3. Press the input selector on your TV remote control until the Component signal from the DVD player appears on the TV screen.
4. Set the Video Output to **I-SCAN/P-SCAN** in the Display Setup menu. You can use the **VIDEO SEL.** button to change the Video Output mode.

Note

- What is "Progressive Scan"?
- Progressive scan has twice as many scanning lines as the interlace output method has. Progressive scanning method can provide better and clearer picture quality.

C. Connecting to a TV with DVI/HDMI Jack (ONLY DVD-D530K/D530)

1. Using the HDMI-DVI/HDMI-HDMI cable, connect the **HDMI OUT** terminal on the rear of the DVD player to the **DVI/HDMI IN** terminal of your TV.
2. Using the audio cables, connect the **AUDIO (red and white) OUT** terminals on the rear of the DVD player to the **AUDIO (red and white) IN** terminals of your TV. Turn on the DVD player and TV.
3. Press the input selector on your TV remote control until the DVI/HDMI signal from the DVD player appears on your TV screen.

HDMI VIDEO Specifications (ONLY DVD-D530K/D530)

When you press the **HDMI SEL.** button, 480p, 576p, 720p, 1080p, 1080i are selected in order.

The first press of the **HDMI SEL.** button brings up the current resolution.

The second press allows you to change the HDMI output resolution.

- Depending on your TV, certain HDMI output resolutions may not work.
- Please refer to the user's manual of your TV.
- If HDMI or HDMI-DVI cable is plugged into TV, the DVD player's output is set to HDMI/DVI within 10 seconds.

Connections

Choosing a Connection

The following shows examples of connections commonly used to connect the DVD Player with a TV and other components.

Before Connecting the DVD Player

- Always turn off the DVD player, TV, and other components before you connect or disconnect any cables.
- Refer to the user's manual of the additional components you are connecting for more information on those particular components.

- If you set the HDMI output resolution 720p, 1080p or 1080i, HDMI output provides better picture quality.
- If you connect an HDMI cable between Samsung TV and this DVD player, you can operate this DVD player using your TV remote control. This is only available with Samsung TVs that support Anynet+ (HDMI-CEC).
- If your TV has an Anynet+ logo, then it will Anynet+ Supports the Anynet+ Function.

• HDMI (High Definition Multimedia Interface)

HDMI is an interface to enable the digital transmission of video and audio data with just a single connector. Using HDMI, the DVD player transmits a digital video and audio signal and displays a vivid picture on a TV having an HDMI input jack.

• HDMI connection description HDMI connector

- Both uncompressed video data and digital audio data (LPCM or Bit Stream data). - Though the player uses a HDMI cable, the player outputs only a pure digital signal to the TV.
- If TV does not support HDCP (High-bandwidth Digital content protection), snow noise appears on the screen.

• Why does Samsung use HDMI?

Analog TVs require an analog video/audio signal. However, when playing a DVD, the data transmitted to a TV is digital. Therefore either a digital-to-analog converter (in the DVD player) or an analog-to-digital converter (in the TV) is required. During this conversion, the picture quality is degraded due to noise and signal loss. DVI technology is superior because it requires no D/A conversion and is a pure digital signal from the player to your TV.


• What is the HDCP?

HDCP (High-bandwidth Digital Content Protection) is a system for protecting DVD content outputted via DVI from being copied. It provides a secure digital link between a video source (PC, DVD, etc.) and a display device (TV, projector, etc.). Content is encrypted at the source device to prevent unauthorized.


D. Connection to an Audio System (2 Channel Amplifier, Dolby Digital, or MPEG2)

1. Using the audio cables, connect the **AUDIO (red and white) OUT** terminals on the rear of the DVD player to the **AUDIO (red and white) IN** terminals of the Amplifier. If using a coaxial cable, connect the **DIGITAL AUDIO OUT (COAXIAL)** terminal on the rear of the DVD player to the **DIGITAL AUDIO IN (COAXIAL)** terminal of the Amplifier.
2. Using the video signal cable(s), connect the **VIDEO, COMPONENT** or **HDMI OUT** terminals on the rear of the DVD player to the **VIDEO, COMPONENT** or **DVI IN** terminals of your TV
3. Turn on the DVD player, TV, and Amplifier.
4. Press the input select button of the Amplifier to select **external input** in order to hear sound from the DVD player. Refer to your Amplifier's user manual to set the Amplifier's audio input.

DVD-D530K DVD-D530

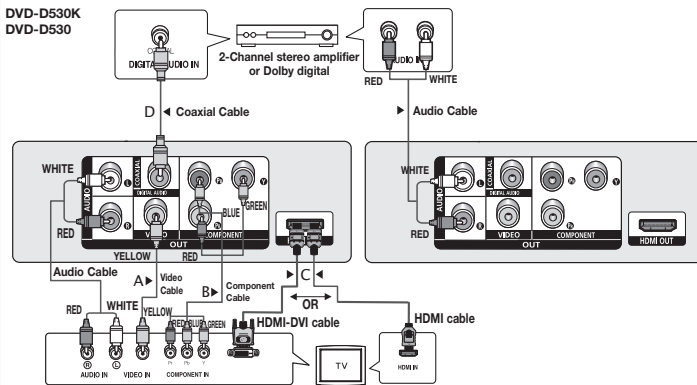

DVD-D360K

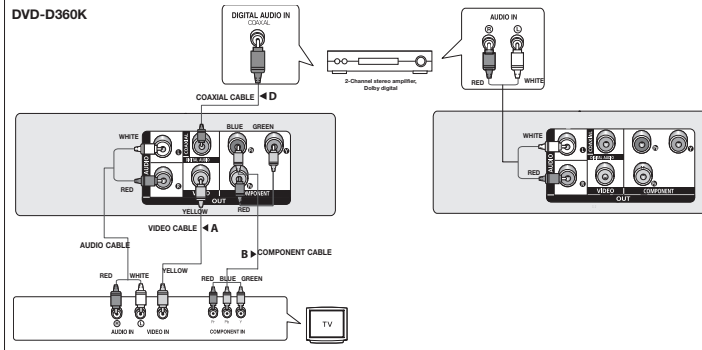

Basic functions

Playing a Disc

Before Play

- Turn on your TV and set it to the correct Video Input by pressing TV/VIDEO button on the TV remote control.
- If you connected an external Audio System, turn on your Audio System and set it to the correct Audio Input.

After plugging in the player, the first time you press the DVD POWER button, this screen comes up: If you want to select a language, press the **▲/▼** button, and then press the **ENTER** button. (This screen will only appear when you plug in the player for the first time.) If the language for the startup screen is not set, the set-tings may change whenever you turn the power on or off. Therefore, make sure that you select the language you want to use. Once you select a menu language, you can change it by pressing the **►II** button on the front panel of the unit for more than 5 seconds with no disc in the unit. Then the **SELECT MENU LANGUAGE** window appears again where you can reset your preferred language.

Using the Search and Skip Functions

During play, you can search quickly through a chapter or track, and use the skip function to jump to the next selection.

Searching through a Chapter or Track

During play, press the SEARCH (**◀◀** or **▶▶**) button on the remote control for more than 1 second.

DVD	2X, 4X, 8X, 16X, 32X
CD	2X, 4X, 8X, 16X, 32X
VCD	4X, 8X

Note

- The speed marked in this function may be different from the actual playback speed.
- No sound is hearing during search mode (Except CD).

Skiping Tracks

During play, press the SKIP (**◀◀** or **▶▶**) button.









- When playing a DVD, if you press the SKIP (**▶▶**) button, it moves to the next chapter. If you press the SKIP (**◀◀**) button, it moves to the beginning of the chapter. One more press makes it move to the beginning of the previous chapter.
- When playing a VCD, if you press the SKIP (**▶▶**) button, it moves to the next track. If you press the SKIP (**◀◀**) button, it moves to the beginning of the track. One more press makes it move to the beginning of the previous track.
- If a track exceeds 15 minutes when playing a VCD and you press the **▶▶I** button, it moves forward 5 minutes. If you press the **I◀◀** button, it moves to the beginning of the track. One more press makes it move to the beginning of the previous track.

Using the Display Function

When Playing a DVD/VCD/MPEG4

1. During play, press the **TOOLS** button on the remote control.
2. Press the **▲/▼** buttons to select the desired item.
3. Press the **◀/▶** buttons to make the desired setup.
4. To make the screen disappear, press the **TOOLS** button again.

The functions when using the Display function are listed in the table below.

	To access the desired title when there is more than one in the disc. For example, if there is more than one movie on a DVD, each movie will be identified.
	Most DVD discs are recorded in chapters so that you can quickly find a specific passage.
	Allows playback of the film from a desired time. You must enter the starting time as a reference. The time search function does not operate on some disc.
	Refers to the language of the film soundtrack. In the example, the soundtrack is played in English 5.1CH. A DVD disc can have up to eight different soundtracks.
	Refers to the subtitle languages available in the disc. You will be able to choose the subtitle languages or, if you prefer, turn them off from the screen. A DVD disc can have up to 32 different subtitles.
	User will be able to choose EZ-View type.
	Press enter to activate the Zoom function.
	To access the desired Angle function. Some DVD disc are have more than one recorded angle.

Using the Disc and Title Menu

During the playback of a DVD disc, press the **DISC MENU/TITLE MENU** button on the remote control.

Note

- Depending on a disc, the Disc Menu/Title Menu may not work.
- You can also use the Disc Menu, using the DISC MENU button on the remote control.
- Title Menu will only be displayed if there are at least two titles in the disc.

Repeat Play

Repeat the current track, chapter, title, a chosen section (A-B), or all of the disc.

When playing a DVD/VCD

1. Press the **REPEAT** button on the remote control. Repeat screen appears.
2. Press the **REPEAT** or **▲/▼** button to change playback mode. DVD repeats play by chapter or title.
 - Off.
 - Title : repeats the title that is playing.
 - Chapter : repeats the chapter that is playing.
 - Repeat A-B (Only DVD-D360K)

Using the A-B Repeat function (Only DVD-D360K)

1. Press the REPEAT button on the remote control. The repeat screen appears.
2. Press the ▲/▼ button to select the REPEAT A-B and then press ENTER.
3. Press the ENTER at the point where you want repeat play to start (A).
4. Press the ENTER at the point where you want repeat play to stop (B).

Using the A-B Repeat function (Only DVD-D530K/D530)

1. Press the REPEAT A-B button on the remote control.
2. Press the REPEAT A-B button at the point where you want repeat play to start (A).
3. Press the REPEAT A-B button at the point where you want the repeat play to stop (B).
3. To return to normal play, press the REPEAT A-B button until the display shows Repeat : Off.

Note

- A-B REPEAT allows you to set point (B) directly after point (A) has been set.
- Depending on a disc, the Repeat function may not work.

Slow Play

This feature allows you slowly to repeat scenes containing sports, dancing, musical instruments being played etc., so you can study them more closely.

When playing a DVD

1. During play, press the PAUSE (II)/PLAY (▶II) button.
2. Press the SEARCH (◀◀▶▶) button to choose the play speed between 1/2, 1/4, 1/8, 1/16, 1/2 and so on. If you want to go normal play press PLAY button.

Advanced functions

Adjusting the Aspect Ratio (EZ View)

To play back using aspect ratio (DVD)

1. During play, press the EZ VIEW/TOOLS button on the remote control.
2. Press the EZ VIEW or ▲/▼ buttons to select the screen size. Each time you press the ▲/▼ or ◀/▶ buttons, the screen size changes. For graphics of the screen sizes and lists of the sequences in which the sizes change, see the next column.
3. Press the EXIT/RETURN button to exit EZ View.

If you are using a 16:9 TV

For 16:9 aspect ratio discs

- WIDE SCREEN
- SCREEN FIT
- ZOOM FIT

For 4:3 aspect ratio discs

- Normal Wide
- SCREEN FIT
- ZOOM FIT
- Vertical Fit

If you are using a 4:3 TV

For 16:9 aspect ratio discs

- 4:3 Letter Box
- 4:3 Pan Scan
- SCREEN FIT
- ZOOM FIT

For 4:3 aspect ratio discs

- Normal Screen
- SCREEN FIT
- ZOOM FIT

Note

This function may behave differently depending on the type of disc.

Selecting the Audio Language

You can select a desired audio language quickly and easily with the AUDIO button.

Using the AUDIO/ ◀ button (DVD/VCD/MPEG4)

1. During play, Press the AUDIO/ ◀ button. Change the audio language by pressing the AUDIO or ▲/▼ button.
 - The audio languages are represented by abbreviations.
2. To remove the AUDIO icon, press the EXIT/RETURN button.

Note

- This function depends on audio languages are encoded on the disc and may not work.
- A DVD disc can contain up to 8 audio languages.

Selecting the Subtitle Language

You can select a desired subtitle quickly and easily with the SUBTITLE/(▲) button.

Using the SUBTITLE/(▲) button (DVD/MPEG4)

1. During play, Press the SUBTITLE/(▲) button.
2. Press the SUBTITLE/(▲) or ▲/▼ button to change the language. Each time you press the SUBTITLE/(▲) or ▲/▼ button, the language changes.
3. To remove the SUBTITLE icon, press the EXIT/RETURN button.

Note

- The subtitle languages are represented by abbreviations.
- You have to change the desired subtitle in the Disc Menu, according to discs. Press the DISC MENU button.
- This function depends on what subtitles are encoded on the disc and may not work on all DVDs.
- A DVD disc can contain up to 32 subtitle languages.

Changing the Camera Angle

When a DVD contains multiple angles of a particular scene, you can use the ANGLE function.

Using the ANGLE function (DVD)

If the disc contains multiple angles, the ANGLE appears on the screen.

1. During play, press the TOOLS button on the remote control.
2. Press the ▲/▼ buttons to select the ANGLE icon. When the angle screen is displayed, press the ◀/▶ buttons on the remote control to select the desired angle option.

Using the Bookmark Function

This feature lets you bookmark sections of a DVD or VCD (Menu Off mode) so you can quickly find them at a later time.

Using the Bookmark Function (DVD/VCD)


1. During play, press the MARKER button on the remote control.
2. When you reach the scene you want to mark, press the ◀/▶ or ▲/▼ buttons, and then press MARKER button. Up to 12 scenes may be marked at a time.

- Depending on a disc, the Bookmark function may not work.

1. During play, press the **MARKER** button on the remote control.
2. Press the ◀▶ or ▲▼ buttons to select a marked scene.
3. Press the **PLAY** (▶) button to skip to the marked scene.

1. During play, press the **MARKER** button on the remote control.
2. Press the **◀/▶** or **▲/▼** buttons to select the bookmark number you want to delete.
3. Press the **ENTER** button to delete a bookmark number.


Using the Zoom Function (DVD/VCD)

1. During play or pause mode, press the **TOOLS** buttons on the remote control.
2. Press the **▲/▼** buttons to select  icon, then press the **ENTER** button to zoom in X1.X2.X3.X4.

CD Audio or discs with MP3/WMA/JPEG/MPEG4 contain individual songs and/or pictures that can be organized into folders as shown below. They are similar to how you use your computer to put files into different folders.

To go access these folders and the files in them, follow these steps :

1. Open the disc tray. Place the disc on the tray.
2. Close the tray. The tray closes and the Parent Folder Menu screen appears (top screen image.) Parent folders contain all the Peer folders that have the same kind of content: music, video, photos, etc.
3. Press the ◀/▶ buttons to select the Parent folder of your choice, and then press the **ENTER**. A screen displaying the Peer folders appears. The Peer folders contain all the folders with the same kind of content (video, music, photos, etc.) that are in the Parent folder.

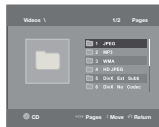

The folder can be selected both in Stop or Play mode.

- **To select the Parent Folder**
Press the **RETURN** button to go to parent folder, or press the **▲/▼** buttons to select “..” and press **ENTER** to go to the parent folder.
- **To select the Peer Folder**
Press the **▲/▼** buttons to select the desired folder, then press **ENTER**.
- **To select the Sub-Folder**
Press the **▲/▼** buttons to select the desired folder, then press **ENTER**.

1. Open the disc tray. Place the disc on the tray. Close the tray.
2. Press the ◀/▶ buttons to select a Music folder, and then press **ENTER**. Press the ▲/▼ buttons to select a song file, and then press the **ENTER** to begin playback of the song.

Press the **REPEAT** button to change the playback mode. There are four modes, such as **Off**, **Track**, **Folder** and **Random**.

- Off (⇐): Normal Playback
 - Track (📁): Repeats the current song file.
 - Folder (📁): Repeats the song files which have the same extension in the current folder.
 - Random (⇄): Song files which have the same extension will be played in random order.
- To resume normal play, press the **REPEAT** button until the Repeat : Off.

When you record MP3 or WMA files on CD-R, please refer to the following.

- Your **MP3 or WMA files** should be **ISO 9660 or JOLIET format**.
ISO 9660 format and Joliet MP3 or WMA files are compatible with Microsoft's DOS and Windows, and with Apple's Mac. This format is the most widely used.
- **When naming your MP3 or WMA files, do not exceed 8 characters, and enter ".mp3, .wma" as the file extension.**
General name format : Title.mp3. or Title.wma. When composing your title, make sure that you use 8 characters or less, have no spaces in the name, and avoid the use of special characters including: (,./\=,+).
- **Use a decompression transfer rate of at least 128 Kbps when recording MP3 files.**
Sound quality with MP3 files basically depends on the rate of compression/decompression you choose. Getting CD audio sound requires an analog/digital sampling rate, that is conversion to MP3 format, of at least 128 Kbps and up to 160 Kbps. However, choosing higher rates, like 192 Kbps or more, only rarely give better sound quality. Conversely, files with decompression rates below 128 Kbps will not be played properly.
- **Use a decompression transfer rate of at least 64Kbps when recording WMA files.**
Sound quality with WMA files basically depends on the rate of compression/decompression you choose. Getting CD audio sound requires an analog/digital sampling rate, that is conversion to WMA format, of at least 64Kbps and up to 192Kbps. Conversely, files with decompression rates below 64Kbps or over 192Kbps will not be played properly. Sampling rate that can be supported for WMA files is > 30Khz.
- **Do not try recording copyright protected MP3 files.**
Certain "secured" files are encrypted and code protected to prevent illegal copying. These files are of the following types: Windows Media™ (registered trade mark of Microsoft Inc) and SDMI™ (registered trade mark of The SDMI Foundation). You cannot copy such files.
- **Important:**
The above recommendations cannot be taken as a guarantee that the DVD player will play MP3 recordings, or as an assurance of sound quality. You should note that certain technologies and methods for MP3 file recording on CD-Rs prevent optimal playback of these files on your DVD player (degraded sound quality and in some cases, inability of the player to read the files).
- This unit can play a maximum of 500 files and 500 folders per disc.

MPEG4 Play Function

AVI files are used to contain the audio and video data. Only AVI format files with the “.avi” extensions can be played.

1. Open the disc tray. Place the disc on the tray. Close the tray.
2. Press the ◀/▶ buttons to select a Videos Menu , then press the **ENTER**. Press the ▲/▼ to select an avi file (DivX/XviD) then press the **ENTER**. Press the ▲/▼ and then press the **ENTER** button.

Repeat and Repeat A-B playback

1. Press the **REPEAT** button , then press **REPEAT** or **▲/▼** buttons to change playback mode. There are 3 modes, such as Off, Folder and Title.
 - Off : No Repeat mode.
 - Title : repeats the title that is playing.
 - Folder : repeats the AVI files which have the same extension in the current folder.

Repeat A-B playback (Only DVD-D360K)

1. Press the **REPEAT** button on the remote control. The repeat screen appears.
2. Press the **▲/▼** button to select the **REPEAT A-B** and then press **ENTER**.
3. Press the **ENTER** at the point where you want repeat play to start (A).
4. Press the **ENTER** at the point where you want repeat play to start (B).

Repeat A-B playback (Only DVD-D530K/D530)

1. Press the **REPEAT A-B** button on the remote control.
 2. Press the **REPEAT A-B** button at the point where you want repeat play to start (A).
 3. Press the **REPEAT A-B** button at the point where you want the repeat play to stop (B)
- To return to normal play, press the **REPEAT A-B** button until the display shows Repeat : Off.

Note

- A-B REPEAT allow you to set point (B) directly after point (A) has been set.

MPEG4 Function Description

Function	Description
Skip (◀◀ or ▶▶)	During play, press the ◀◀ or ▶▶ button, it moves to next or previous track.
Search (◀◀ or ▶▶)	During play, press the SEARCH (◀◀ or ▶▶) button and press again to search at a faster speed. Allows you to search at a faster speed in an AVI file. (2X, 4X, 8X, 16X, 32X)
Slow Motion Play	Allows you to search at a slower speed in an AVI file. (1/2, 1/4, 1/8, 1/16)
ZOOM	X1/X2/X3/X4/Normal in order

- These functions may not work depending on MPEG4 file.

CD-R AVI fileThis

unit can play the following video compression formats within the AVI file format:

- DivX 3.11 contents
- DivX 4 contents (Based on MPEG-4 Simple Profile)
- DivX 5 contents (MPEG-4 simple profile plus additional features such as bi-directional frames. Qpel and GMC are also supported.)
- XviD MPEG-4 compliant Contents.

DVD-RW & DVD+R

Format that support for DivX file :

- Basic DivX format DivX3.11 / 4.12/ 5.x

- Xvid (MPEG-4 compliant video codec) and DivX Pro
- File format : *.avi, *.div, *.divx.

Possible warning messages that may appear when trying to play DivX/AVI files are :

1. No Authorization
 - File with bad registration code.
2. Unsupported Codec
 - Files with certain Codec Types, Versions (ex. MP4, AFS and other proprietary codecs) are not supported by this player.
3. Unsupported Resolution
 - Files containing resolutions higher than the player's specification are not supported.

This unit supports all resolutions up to maximum below.

DivX5
720 x 480 @30fps
720 x 576 @25fps:
Maximum bitrate : 4Mbps

Note

- The resolution that can be supported by DVD-D530/D530K model up to 720 x 480 @30 frames/ 720 x 576 @25 frames.
- This unit supports CD-R/RW written in MPEG4 in accordance with the "ISO9660 format".

Playing Media Files Using the USB Host feature

You can enjoy the media files such as pictures, movies and tunes saved in an MP3 player, USB memory or digital camera in high audio by connecting the storage device to the USB port of the DVD Player.

Using the USB HOST feature

1. Connect the USB device to the USB port on the front of the unit.
2. The USB Menu screen appears. Press the ◀/▶ button to select Menu, then press **ENTER**.
3. Press the ▲/▼ buttons to select a file in the USB device. Press **ENTER** to Open the file.

Note

- Each time the USB button on the remote control is pressed, a frame of the USB device selection will appear.
- "USB Loading" appears on the display screen.
- Depends on the file size and clip duration, loading time on USB may take longer than using CD or DVD media.
- USB MENU screen appears on the TV screen and the saved file is played.
- If there is a Disc in the unit, pressing the DVD button (DVD-D530K/DVD-D530) or USB button (DVD-D360K) will make the player exit the USB menu and load the disc

Safe USB Removal

1. Press the DVD button (DVD-D530K/DVD-D530) or USB button (DVD-D360K) to return to disc mode or the main screen.
2. Press the STOP (■) button
3. Remove the USB cable.

Skip Forward/Back

During playback, press the (◀◀▶▶) button.

- When there is more than one file, when you press the ▶▶ button, the next file is selected.
- When there is more than one file, when you press the ◀◀ button, the previous file is selected.

Fast playback

To play back the disc at a faster speed, press (◀◀▶▶) during playback

- Each time you press either button, the playback speed will change as follows : 2X → 4X → 8X → 16X → 32X.

Compatible Devices

1. USB devices that support USB Mass Storage v1.0.(USB devices that operate as a removable disk in Windows (2000 or later) without additional driver installation.)
2. MP3 Player: Flash type MP3 player.
3. Digital camera: Cameras that support USB Mass Storage v1.0.
 - Cameras that operate as a removable disk in Windows (2000 or later) without additional driver installation.
4. USB Flash Drive: Devices that support USB2.0 or USB1.1.
 - You may experience a difference in playback quality when you connect a USB1.1 device.
5. USB card Reader: One slot USB card reader and Multi slot USB card reader

- Depending on the manufacturer, the USB card reader may not be supported.
 - If you install multiple memory devices into a multi card reader, you may experience problems.
6. If you use a USB extension cable, the USB device might not be recognized.
- CBI (Control/Bulk/Interrupt) is not supported.
 - Digital Cameras that use PTP protocol or require additional program installation when connected to a PC are not supported.
 - A device using NTFS file system is not supported. (Only FAT 16/32 (File Allocation Table 16/32) file system is supported.)
 - Some MP3 players, when connected to this product, may not operate depending on the sector size of their file system.
 - The USB HOST function is not supported if a product that transfers media files by its manufacturer-specific program is connected.
 - Does not operate with Janus enabled MTP(Media Transfer Protocol) devices.
 - The USB host function of this product does not support all USB devices.
 - The USB Host does not support USB Hard Disc Drives (HDD).

CD Ripping

This feature allows you to copy audio files from a disc to a USB device in MP3 format.

Open the disc tray. Place the Audio CD(CD DA) disc on the tray, and close the tray. Connect the USB device to the USB port on the front of the unit. Press the DVD button (DVD-D530K/DVD-D530) or USB button (DVD-D360K).

1. Press the **TOOLS** button to display the Ripping screen.
2. Press the **▲/▼** buttons, then press the **ENTER** button to select files for ripping.
 - To deselect files, press ENTER button again.
3. Press the **◀** and **▼** button to select **START**, then press the **ENTER** button begin ripping.

The Ripping menu contains the following buttons :

 - Mode (Fast/Normal)
 - Bitrate, press ENTER to change : 128kbps → 192kbps → 128kbps.
 - Standard : 128kbps
 - Better Quality : 192kbps
 - Device selection, press ENTER to change between partitions on the USB device (max 4).
 - Select - Unselect, press ENTER to change from Select all (files) or Select none.

Note

- To cancel copying in progress, press the **ENTER** button.
- To return to the CDDA screen, press the **TOOLS** button again.
- While the CD is being ripped, the player will automatically enter stop mode.
- The ripping process is 2.6 times of normal speed.
- The DVD player can only rip Audio CD (CD DA) discs.
- The USB button does not work while you're in the Ripping menu.
- CD ripping function may not be supported for some MP3 players device.

Picture CD Playback

1. Select the desired folder.
2. Press the **▲/▼** buttons to select a Picture file in the clips menu and then press the **ENTER** button.

Note

- Press the STOP button to return to the clips menu.
- When playing a Kodak Picture CD, the unit displays the Photo directly, not the clips menu.

Rotation

- Press the **TOOLS** button to select Rotate, and then press the **ENTER** button.
- Each time the **◀/▶** buttons are pressed, the picture rotates 90 degrees clockwise.
- Each time the **▲** button is pressed, the picture will reverse to the upside down to show a mirror image.
- Each time the **▼** button is pressed, the picture will reverse to the right side to show a mirror image.

Zoom

- Press the **TOOLS** button to select Zoom, and then press the **ENTER** button.
- Each time **ENTER** button is pressed, the picture is enlarged. Zoom mode : X1-X2-X3-X4-X1.

Slide Show

- When you press the PLAY at JPEG file, it will go to full screen mode and automatically slide show.

Note

- Depending on a file size, the amount of time between each picture may be different from the manual.
- If you don't press any button, the slide show will start automatically in about 10 seconds by default.

Picture CD Playback for HD-JPEG (Only DVD-D530K/D530)

Must connect to HDMI. Resolution should be 720p/1080i/ 1080p, and HD-JPEG should be in HD mode.

1. Select the desired folder.
2. Press the **▲/▼** buttons to select a Picture file in the clip menu and then press the **ENTER** button.
 - Press the STOP (**■**) button to return to the clips menu.
 - When playing a Kodak Picture CD, the unit displays the Photo directly, not the clips menu.

• Rotation

Press the **TOOLS** button to select Rotate, and then press the **ENTER** button. Press the **◀/▶** button to rotate the screen 90 degrees to the left/right.

• Zoom

Press the **TOOLS** button to select Zoom, and then press **ENTER**. Each time **ENTER** button is pressed, the picture is enlarged. Zoom mode : X1-X2-X3-X4-X1.

• Skip Picture

Press the **◀◀** or **▶▶** button to select previous or next picture.

• Slide Show

Press the PLAY (**▶**) button to start SLIDE function. Press the PAUSE (**||**) button to stop SLIDE function. To continue slide show press PLAY button.

Note

- Depending on a file size, the amount of time between each picture may be different from the set interval time.
- The image may be displayed at a smaller size depending on the picture size when displaying images in HD-JPEG mode.
- It is recommended to set the "BD Wise" to "Off" in case of playback JPEG image file bigger than 720 X 480 pixel size.

MP3-JPEG Playback

You can play JPEG using music as a background.

1. Press the **▲/▼** buttons to select an MP3 file in the clips menu and then press the **ENTER** button.

To return to the menu screen, Press the **RETURN** or **MENU** buttons.

2. Press the ◀/▶ buttons to select Photos Menu, and then press the **ENTER** button.
Press the ▲/▼ buttons to select a JPEG file in the clips menu and then press the **ENTER** button.
- Music will play from the beginning
3. Press Stop button when you want to stop the playback.

Note

MP3 and JPEG files have to be on the same disc.

CD-R JPEG Disc

- Only files with the ".jpg" and ".JPG" extensions can be played.
- If the disc is not closed, it will take longer to start playing and not all of the recorded files may be played.
- Only CD-R discs with JPEG files in ISO 9660 or Joliet format can be played.
- The name of the JPEG file may not be longer than 8 characters and should contain no blank spaces or special characters (. / = +).
- Only a consecutively written multi-session disc can be played. If there is a blank segment in the multi-session disc, the disc can be played only up to the blank segment.
- A maximum of 500 images can be stored on a single CD.
- Kodak Picture CDs are recommended.
- When playing a Kodak Picture CD, only the JPEG files in the pictures folder can be played.
- Kodak Picture CD: The JPEG files in the pictures folder can be played automatically.
- Konica Picture CD: If you want to see the Picture, select the JPEG files in the clips menu.
- Fuji Picture CD: If you want to see the Picture, select the JPEG files in the clips menu.
- QSS Picture CD: The unit may not play QSS Picture CD.
- If the number of files in 1 Disc is over 500, only 500 JPEG files can be played.
- If the number of folders in 1 Disc is over 500, only JPEG files in 500 folders can be played.

Karaoke functions (Only DVD-D530K/D360K)

Karaoke Functions

Operation Sequence

1. Connect the terminals Mixed Audio Out to TV or Amplifier.
2. Connect the microphone plug to Mic (microphone) and set Karaoke score to On. When MIC is connected and Karaoke score is On, the karaoke functions can be used.

Echo/Microphone Volume/Key Control (Tone control)

1. Play the karaoke disc containing the songs you want.
- Press the **KARAOKE** (▼) button, and then press ▲/▼ to select **ECHO**, **VOL** or **KEY**.
2. Press the ◀/▶ buttons to change the desired item.

Karaoke Scoring (Score)

The scoring will appear as :

1. The microphone is connected and Karaoke score is On.
2. At the end of each chapter/title of karaoke disc.
- If the DVD karaoke have any information on the scoring drive.
- In case of VCD, the device can not differentiate between hard karaoke or movies, then the scoring will always appear.
3. Karaoke score will appear at the end of time for each chapter/title for about 6s.

[Downloaded From Disc-Player.com](http://www.Disc-Player.com) [Samsung Manuals](http://www.Samsung-Manuals.com)

Karaoke Sound Recording

1. Insert USB storage media into USB jack and then connected the microphone plug to Mic.
2. To star karaoke recording, choose one of VCD/DVD/SVCD file, then press **RECORD** button.
3. When recording, user can only press **STOP** button and **PAUSE** button to cancel the recording.
4. If user do cancelation, then file result will be saved.

Note

- If you hear feedback(squealing or howling) while using the karaoke feature, move the microphone away from the speakers or turn down the microphone volume or the speaker volume.
- When playing MP3, WMA and LPCM disc, the karaoke functions will not operate.
- When the MIC is connected, Digital Out does not work.
- The MIC sound outputs only from Analog Audio Out.
- If MIC is connected to the MIC jack on the front panel, 5.1CH audio will be changed in to 2 CH audio automatically, this condition can't be change unless the MIC is plugged out.

Changing setup menu

Using the Setup Menu

The Setup menu lets you customize your DVD player by allowing you to select various language preferences, set up a parental level, even adjust the player to the type of television screen you have.

1. With the unit in Stop mode, press the **MENU** button on the remote control. Press the ◀/▶ buttons to select **SETTINGS**, then press the **ENTER** button.
2. Press the ▲/▼ buttons to select a Setup Menu, then press the ► or **ENTER** to bring up the sub-menu.
3. Press the ▲/▼ buttons to select a sub-menu option, then press the ► or **ENTER**.
4. To make the setup screen disappear after setting up, press the **RETURN** button.

Setting Up the Display Options

Display options enable you to set various video functions of the player.

1. With the unit in Stop mode, press the **MENU** button. Press the ◀/▶ buttons to select **SETTINGS**, then press the **ENTER** button.
2. Press the ▲/▼ buttons to select **DISPLAY**, then press the ► or **ENTER** button.
3. Press the ▲/▼ buttons to select the desired item, then press the ► or **ENTER** button.

Setting Up the BD Wise (Only DVD-D530K/D530)

When the player is connected to a SAMSUNG TV which supports "BD Wise", you can enjoy optimized Picture Quality by setting the "BD Wise" function as "On".

1. With the unit in Stop mode, press the **MENU** button. Press the ◀/▶ buttons to select **SETTINGS**, then press the **ENTER** button.
2. Press the ▲/▼ buttons to select **DISPLAY**, then press the ► or **ENTER** button.
3. Press the ▲/▼ buttons to select **BD WISE**, then press the ► or **ENTER** button.
Press the ▲/▼ buttons to select **ON/OFF**, then press the **ENTER** button.

Note

- This option can be changed only when TV support BD Wise.
- Consult your TV User's Manual to find out if your TV supports Progressive Scan. If Progressive Scan is supported, follow the TV User's Manual regarding Progressive Scan settings in the TV's menu system.
- If Video Output is set incorrectly, the screen may be blocked.
- The resolutions available for HDMI output depend on the connected TV or projector. For details, see the user's manual of your TV or projector.
- When the resolution is changed during playback, it may take a few seconds for a normal image to appear.
- If you set the HDMI output resolution 720p,1080p or 1080i, HDMI output provides better picture quality.
- It is recommended to set the "BD Wise" to "Off" In case of playback JPEG image file bigger than 720 X 480 pixel size.

Setting Up the Audio Options

Audio Options allows you to setup the audio device and sound status settings depending on the audio system in use.

1. With the unit in Stop mode, press the MENU button. Press the ◀/▶ buttons to select **SETTING**, then press the **ENTER** button.
2. Press the ▲/▼ buttons to select **AUDIO**, then press the ► or **ENTER** button.
3. Press the ▲/▼ buttons to select the desired item, then press the ► or **ENTER** button.

Note :

- When play a disc that has MPEG Audio and you have Bitstream selected in the Audio Options menu, the Digital Audio jack may not output audio
- There is no analogue audio output when you play a sound disc.
- Even when PCM Down sampling is Off
 - Some discs will only output down sampled audio through the digital outputs.

HDMI (Only DVD-D530K/D530)

- If your TV is not compatible with compressed multi-channel formats (Dolby Digital, MPEG), you should set Digital Audio to PCM.
- If your TV is not compatible with LPCM sampling rates over 48kHz, you should set PCM Down sampling to On.

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

Setting Up the System Options

1. With the unit in Stop mode, press the **MENU** button. Press the ◀/▶ buttons to select **SETTINGS**, then press the **ENTER** button.
2. Press the ▲/▼ buttons to select **SYSTEM**, then press the ► or **ENTER** button.
3. Press the ▲/▼ buttons to select the desired item, then press the ► or **ENTER** button.

Setting Up the Anynet+(HDMI-CEC) (Only DVD-D530K/D530)

Anynet+ is a function that can be used to operate the unit using a Samsung TV remote control, by connecting the DVD D530/D530K to a SAMSUNG TV using a HDMI Cable. (This is only available with SAMSUNG TVs that support Anynet+.

Select On when you connect the DVD D530/D530K with Samsung TV that support Anynet+.

1. With the unit in Stop mode, press the **MENU** button. Press the ◀/▶ buttons to select **SETTINGS**, then press the **ENTER** button.
2. Press the ▲/▼ buttons to select **SYSTEM**, then press the ► or **ENTER** button.
3. Press the ▲/▼ buttons to select **ANYNET+ (HDMI-CEC)**, then press the ► or **ENTER** button.
4. Set the Anynet+(HDMI-CEC) to "On" on your DVD Player, then press the **ENTER** button.
5. Set the Anynet+ function at your TV. (See the TV instruction manual for more information.).

Note

- By pressing the **PLAY** button of the unit while watching TV, the TV screen will change to the play screen.
- If you play a DVD when the TV power is off, the TV will power On.
- If you turn the TV off, the DVD Player will power off automatically.
- If you change the HDMI to other sources (Composite, Component,.... etc) in TV while playing the DVD disc, the DVD Player will stop playing.

Setting Up the Language Features

If you set the player menu, disc menu, audio and subtitle language in advance, they will come up automatically every time you watch a movie.

1. With the unit in Stop mode, press the **MENU** button. Press the ◀/▶ buttons to select **SETTINGS**, then press the **ENTER** button.
2. Press the ▲/▼ buttons to select **LANGUAGE**, then press the ► or **ENTER** button.
3. Press the ▲/▼ buttons to select the desired language, then press the ► or **ENTER** button.

Note

- The language is selected and the screen returns to Language Setup menu.
- To make the setup menu disappear, press the MENU button.
- If the selected language is not recorded on the disc, the original pre-recorded language is selected.
- Select "Original" if you want the default soundtrack language to be the original language the disc is recorded in.
- Select "Automatic" if you want the subtitle language to be the same as the language selected as the audio language.
- Some discs may not contain the language you select as your initial language; in that case the disc will use its original language setting.

Setting Up the Security Options

The Parental Control function works in conjunction with DVDs that have been assigned a rating, which helps you control the types of DVDs that your family watches. There are up to 8 rating levels on a disc.

Setting Up the Rating Level and Changing the Password

1. With the unit in Stop mode, press the **MENU** button. Press the ◀/▶ buttons to select **SETTINGS**, then press the **ENTER** button.
2. Press the ▲/▼ buttons to select **SECURITY**, and then press the ▶ or **ENTER** button. Enter your password.
3. Press the ▲/▼ buttons to select **PARENTAL/CHANGE PASSWORD**, and then press the ▶ or **ENTER** button.
4. Press the ▲/▼ buttons to select the rating level you want, and then press the **ENTER** button.
e.g) Setting up in **KID SAFE**
- For example, if you select the Kids Safe level, discs that contain level 2 or higher will not play.
5. Enter your password. If this is the first time, enter 0000. Then, enter a new password. The new password must be a number other than 0000 to activate the parental control function. Then, re-enter the new password.

Security Levels :

❶ KID SAFE

❷ G (General Audiences) : All Ages Admitted

❸ PG (Parental Guidance suggested) : Some material may not be suitable for young children.

❹ PG 13 (PG-13 Parents strongly cautioned) : Some material may be inappropriate for children under 13.

❺ PGR (Parental Guidance Recommended) : These are not necessarily unsuitable for children, but viewer discretion is advised, and parents and guardians are encouraged to supervise younger viewers.

❻ R (Restricted) : Under 17 requires accompanying adult

❼ NC17 (NC-17) : No one 17 and under admitted.

❽ ADULT

Note:

- If you have forgotten your password, see "Forgot Password" in the Troubleshooting Guide.

Setting Up the General Options

1. With the unit in Stop mode, press the **MENU** button. Press the ◀/▶ buttons to select **SETTINGS**, then press the **ENTER** button.
2. Press the ▲/▼ buttons to select **GENERAL**, then press the ▶ or **ENTER** button.
3. Press the ▲/▼ buttons to select the desired item, then press the ▶ or **ENTER** button.

Setting Up the Support Options

Support option enable you to check your DVD player information such as the model code, Software Version, The serial and version numbers can be found on the back side of your DVD-Player.

1. With the unit in Stop mode, press the **MENU** button. Press the ◀/▶ buttons to select **SETTINGS**, then press the **ENTER** button.
2. Press the ▲/▼ buttons to select **SUPPORT**, then press the ▶ or **ENTER** button.
3. Select **PRODUCT INFORMATION**, then press the ▶ or **ENTER** button.

Reference

Troubleshooting

Before requesting service (troubleshooting), please check the following.

Problem	Action
The screen is blocked.	• Press the ► button (in front panel) for more than 5 seconds under no disc inside. All setting will revert to factory settings.
Forgot password.	• Press the ► button (in front panel) for more than 5 seconds under no disc inside. All settings including the password will revert to the factory settings. Don't use this unless absolutely necessary.
No HDMI output	• Check the Video output is HDMI enabled. • Check the connection between the TV and the HDMI jack of DVD player. • See if the TV supports this 480p/ 576p/720p/1080i/1080p DVD player.
Abnormal HDMI output screen.	• If snow noise appears on the screen, it means that TV does not support HDCP (High-bandwidth Digital Content Protection).
HDMI output Jitter	• Check your TV system setup correctly. • The screen Jitter phenomenon may occur when frame rate is converted from 50Hz to 60 Hz for 720p/1080i/ 1080p HDMI (High Definition Multimedia Interface) Output. • Please refer to the user's manual of your TV.

Specifications

General	Power Requirements	AC110~240V, 50/60Hz
	Power Consumption	For the power supply and power consumption, refer to the label attached to the product
	Weight	1.2 Kg
	Dimensions	360mm(W) X 207mm(D) X 42mm(H)
	Operating Temperature Range	+5°C to +35°C
	Operating Humidity Range	10 % to 75 %
Video Output	Composite Video	1 channel : 1.0 Vp-p (75 Ω load)
	Component Video	Y : 1.0 Vp-p (75 Ω load) Pr : 0.70 Vp-p (75 Ω load) Pb : 0.70 Vp-p (75 Ω load)
	HDMI (Only DVD-D530K/DVD-D530)	480p, 576p, 720p, 1080p, 1080i
Audio Output	Output terminal	RCA
	Maximum Output Level	2Vrms
	Frequency Response	20 Hz to 20 kHz
	Digital Audio Out	Coaxial terminal (S/PDIF)

Memo

Memo

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

Region	Area	Contact Center ☎	Web Site
North America	Canada	1-800-SAMSUNG (726-7864)	www.samsung.com/ca
	Mexico	01-800-SAMSUNG (726-7864)	www.samsung.com/mx
	U.S.A	1-800-SAMSUNG (726-7864)	www.samsung.com/us
	Argentina	0800-353-3733	www.samsung.com/ar
Latin America	Brazil	0800-124-421, 4004-0000	www.samsung.com/br
	Chile	800-SAMSUNG (726-7864)	www.samsung.com/cl
	Nicaragua	00-1800-5077267	www.samsung.com/latin
	Honduras	800-7919267	www.samsung.com/latin
	Costa Rica	0-800-507-7267	www.samsung.com/latin
	Ecuador	1-800-10-7267	www.samsung.com/latin
	El Salvador	800-8225	www.samsung.com/latin
	Guatemala	1-800-299-0013	www.samsung.com/latin
	Jamaica	1-800-234-7267	www.samsung.com/latin
	Panama	800-7267	www.samsung.com/latin
	Puerto Rico	1-800-682-3180	www.samsung.com/latin
	Rep. Dominica	1-800-751-2676	www.samsung.com/latin
	Trinidad & Tobago	1-800-SAMSUNG (726-7864)	www.samsung.com/latin
	Venezuela	0-800-100-5303	www.samsung.com/latin
	Colombia	01-8000112112	www.samsung.com.co
	Belgium	02 201 2418	www.samsung.com/be (Dutch) www.samsung.com/be_fr (French)
Europe	Czech Republic	800-SAMSUNG (800-726786)	www.samsung.com/cz
	Denmark	8-SAMSUNG (7267864)	www.samsung.com/dk
	Finland	30-6227 515	www.samsung.com/fi
	France	01 4863 0000	www.samsung.com/fr
	Germany	01805-SAMSUNG (726-7864 € 0,14/Min)	www.samsung.de
	Hungary	06-80-SAMSUNG (726-7864)	www.samsung.com/hu
	Italy	800-SAMSUNG (726-7864)	www.samsung.com/it
	Luxemburg	02 261 03 710	www.samsung.com/lu
	Netherlands	0900-SAMSUNG (0900-7267864) (€ 0,10/Min)	www.samsung.com/nl
	Norway	3-SAMSUNG (7267864)	www.samsung.com/no
	Poland	0 801 1SAMSUNG (172678, 022-607-93-33	www.samsung.com/pl
	Portugal	80820-SAMSUNG (726-7864)	www.samsung.com/pt
	Slovakia	0800-SAMSUNG (726-7864)	www.samsung.com/sk
	Spain	902-1-SAMSUNG (902 172 678)	www.samsung.com/es
	Sweden	0771 726 7864 (SAMSUNG)	www.samsung.com/se
	U.K.	0845 SAMSUNG (7267864)	www.samsung.com/uk
	Ire	0818 717 100	www.samsung.com/ie
	Austria	0810-SAMSUNG (7267864, € 0.07/min)	www.samsung.com/at
	Switzerland	0848-SAMSUNG (7267864, CHF 0.08/min)	www.samsung.com/ch www.samsung.com/ch_fr (French)
CIS	Russia	8-800-555-55-55	www.samsung.ru
	Kazakhstan	8-10-800-500-55-500	www.samsung.com/kz_ru
	Uzbekistan	8-10-800-500-55-500	www.samsung.com/kz_ru
	Kyrgyzstan	00-800-500-55-500	
	Tadjikistan	8-10-800-500-55-500	
	Ukraine	8-800-502-0000	www.samsung.ua www.samsung.com/ua_ru
	Belarus	810-800-500-55-500	
	Moldova	00-800-500-55-500	
	Lithuania	8-800-7777	www.samsung.com/lt
	Latvia	8000-7267	www.samsung.com/lv
Asia Pacific	Estonia	800-7267	www.samsung.com/ee
	Australia	1300 362 603	www.samsung.com/au
	New Zealand	0800 SAMSUNG (0800 726 786)	www.samsung.com/nz
	China	400-810-5858, 010-6475 1880	www.samsung.com/cn
	Hong Kong	3696-4698	www.samsung.com/hk www.samsung.com/hk_en/
	India	3030 8282, 1800 110011, 1800 3000 8282	www.samsung.com/in
	Indonesia	0800-112-8888	www.samsung.com/id
	Japan	0120-327-527	www.samsung.com/jp
	Malaysia	1800-88-9999	www.samsung.com/my
	Philippines	1-800-10-SAMSUNG (726-7864), 1-800-3-SAMSUNG (726-7864), 1-800-8-SAMSUNG (726-7864), 02-5805777	www.samsung.com/ph
	Singapore	1800-SAMSUNG (726-7864)	www.samsung.com/sg
	Thailand	1800-29-3232, 02-689-3232	www.samsung.com/th
	Taiwan	0800-329-999	www.samsung.com/tw
	Vietnam	1 800 686 869	www.samsung.com/vn
	Turkey	444 77 11	www.samsung.com/tr
	South Africa	0860-SAMSUNG (726-7864)	www.samsung.com/za
	U.A.E	800-SAMSUNG (726-7864), 8000-4726	www.samsung.com/ae

DVD-D360K
DVD-D530
DVD-D530K

SAMSUNG

جهاز تشغيل دي في دي دليل المستخدم

صور الإمكانيات

شكرا لكم على شراء منتج سامسونج.

لاستلام أفضل الخدمة،

الرجاء تسجيل منتجكم في

www.samsung.com/global/register



AK68-02046A

الاحتياطات

١. الإعداد	٤. القرص
<ul style="list-style-type: none"> - بُرْجِي الرجوع إلى ملصق التعريف الموجود بالجهاز الخلفي من المشغل لمعرفة درجة الفولتية الصحيحة للتشغيل. - قم بتثبيت المشغل في صندوق مزود بفحات تهوية كافية. (٧ إلى ١٠ سم) يجب عدم سد فتحات التهوية الخاصة بأي من المكونات للسماح بدوران الهواء. - يجب عدم دفع درج الأقراص إلى الداخل دويًا. - يجب عدم تكتسب المكونات. - تأكد من إيقاف تشغيل جميع المكونات قبل تحريك المشغل. - تأكد من إيقاف تشغيل المكونات الأخرى قبل توصيلها بهذا المشغل. - تأكد من إخراج القرص وإيقاف تشغيل المشغل بعد الانتهاء من الاستخدام، ولا سيما إذا كنت تعتزم عدم استخدامه لفترة طويلة. - يتم استخدام مقبس الطاقة الرئيسي كجهاز فصل ويجب أن يظاهراً أي وقت. 	<ul style="list-style-type: none"> - يجب عدم تنظيف القرص باستخدام مواد الرش الخاصة بمسح التسيجيلات أو البنزين أو سائل تخفيف الدهان أو غيرها من المذيبات المتطايرة الأخرى والتي قد تتسبب في حدوث تلف بسطح القرص. - يجب عدم لمس سطح إشارات القرص. امسك القرص من إحدى الحواف والفتحة الموجودة بالمتنصف. - امسح الأتربة برفق ولا تمم محلولاً امسح مستخدماً قطعة قماش دهلياً وإيلاً فوق القرص.
٢. المعلومات البينية	٥. المعلومات البينية
<ul style="list-style-type: none"> - تحتوي البطارية المستخدمة في هذا المنتج على مواد كيميائية ضارة بالبيئة. - إذا، يرجى التخلص من البطاريات بالطريقة الصحيحة، وفقاً للتوانين الفيدرالية والدولية والمحلية. 	<ul style="list-style-type: none"> - وحدة المنتج المرفقة بهذا الدليل مخصصة وفقاً لحقوق ملكية فكرية محددة لشركات أطراف أخرى. يقتصر هذا الترخيص على الاستخدام الخاص غير التجاري بواسطة العميل النهائي المنتفع من المحتويات المخصصة. ولا توجد حقوق ممنوعة لاستخدام هذا الجهاز لأغراض تجارية. لا يغطي هذا الترخيص أي وحدة منتج أخرى بخلاف هذه الوحدة، وكذلك لا يشمل الترخيص أي وحدة منتج أو عملية غير مخصصة لتطبيق ISO/OUR 11172-3 و ISO/OUR 13818-3 الترخيص فقط استخدم أي ترابع مرفقة بوحدة المنتج الحالية كذلك يغطي الترخيص فقط استخدام وحدة المنتج الحالية لتشغيل أو فك تشفير ملفات الصوت التي تتطابق مع ISO/OUR 11172-3 أو ISO/OUR 13818-3. لم يتم منح حقوق بموجب هذا الترخيص فيما يتعلق بميزات المنتج ووظائفه التي لا تطابق ISO/OUR 11172-3 أو ISO/OUR 13818-3.
٣. تنبيه	٥. تنبيه
<ul style="list-style-type: none"> - لم يتم تصميم المشغل ليتم استخدامه في أغراض صناعية ولكن لأغراض منزلية. هذا المنتج للاستخدام الشخصي فقط. - يجب عدم تعرض الجهاز لفطرات الماء أو رذاذ الماء كما لا يجب أن يوضع عليه أشياء تحتوي على سوائل مثل أنية الزهور. - يمكن أن تؤثر العوامل الخارجية كالبرق والكهرباء الساكنة على التشغيل الطبيعي لهذا المشغل. إذا واجهت هذه المشكلة، فقم بإيقاف تشغيل المشغل ثم أعد تشغيله بالضبط على الزر POWER، أو أفضل سلك التيار الكهربائي المتردد ثم أعد توصيله بمفخذ التيار الكهربائي المتردد. سيعمل المشغل على نحو طبيعي. - في حالة حدوث تكثف داخل المشغل نتيجة حدوث تغييرات شديدة في درجات الحرارة، ربما لا يعمل المشغل في درجو سليم. في حالة حدوث هذه المشكلة، اترك المشغل في درجة حرارة الغرفة حتى يصبح الجزء الداخلي من المشغل جافاً ومستعداً للعمل. 	<ul style="list-style-type: none"> - تنبيه: قد يؤدي استخدام أزرار التحكم أو إعدادات الضبط أو تنفيذ إجراءات بخلاف الواردة بهذا الدليل إلى التعرض للإشعاع الخطير.

جدول المحتويات

٢. الاحتياطات	٤. الإعداد
<ul style="list-style-type: none"> - يجب عدم تنظيف القرص باستخدام مواد الرش الخاصة بمسح التسيجيلات أو البنزين أو سائل تخفيف الدهان أو غيرها من المذيبات المتطايرة الأخرى والتي قد تتسبب في حدوث تلف بسطح القرص. - يجب عدم لمس سطح إشارات القرص. امسك القرص من إحدى الحواف والفتحة الموجودة بالمتنصف. - امسح الأتربة برفق ولا تمم محلولاً امسح مستخدماً قطعة قماش دهلياً وإيلاً فوق القرص. 	<ul style="list-style-type: none"> - يجب عدم تنظيف القرص باستخدام مواد الرش الخاصة بمسح التسيجيلات أو البنزين أو سائل تخفيف الدهان أو غيرها من المذيبات المتطايرة الأخرى والتي قد تتسبب في حدوث تلف بسطح القرص. - يجب عدم لمس سطح إشارات القرص. امسك القرص من إحدى الحواف والفتحة الموجودة بالمتنصف. - امسح الأتربة برفق ولا تمم محلولاً امسح مستخدماً قطعة قماش دهلياً وإيلاً فوق القرص.
٣. المعلومات البينية	٥. المعلومات البينية
<ul style="list-style-type: none"> - تحتوي البطارية المستخدمة في هذا المنتج على مواد كيميائية ضارة بالبيئة. - إذا، يرجى التخلص من البطاريات بالطريقة الصحيحة، وفقاً للتوانين الفيدرالية والدولية والمحلية. 	<ul style="list-style-type: none"> - وحدة المنتج المرفقة بهذا الدليل مخصصة وفقاً لحقوق ملكية فكرية محددة لشركات أطراف أخرى. يقتصر هذا الترخيص على الاستخدام الخاص غير التجاري بواسطة العميل النهائي المنتفع من المحتويات المخصصة. ولا توجد حقوق ممنوعة لاستخدام هذا الجهاز لأغراض تجارية. لا يغطي هذا الترخيص أي وحدة منتج أخرى بخلاف هذه الوحدة، وكذلك لا يشمل الترخيص أي وحدة منتج أو عملية غير مخصصة لتطبيق ISO/OUR 11172-3 و ISO/OUR 13818-3 الترخيص فقط استخدم أي ترابع مرفقة بوحدة المنتج الحالية كذلك يغطي الترخيص فقط استخدام وحدة المنتج الحالية لتشغيل أو فك تشفير ملفات الصوت التي تتطابق مع ISO/OUR 11172-3 أو ISO/OUR 13818-3. لم يتم منح حقوق بموجب هذا الترخيص فيما يتعلق بميزات المنتج ووظائفه التي لا تطابق ISO/OUR 11172-3 أو ISO/OUR 13818-3.
٣. تنبيه	٥. تنبيه
<ul style="list-style-type: none"> - لم يتم تصميم المشغل ليتم استخدامه في أغراض صناعية ولكن لأغراض منزلية. هذا المنتج للاستخدام الشخصي فقط. - يجب عدم تعرض الجهاز لفطرات الماء أو رذاذ الماء كما لا يجب أن يوضع عليه أشياء تحتوي على سوائل مثل أنية الزهور. - يمكن أن تؤثر العوامل الخارجية كالبرق والكهرباء الساكنة على التشغيل الطبيعي لهذا المشغل. إذا واجهت هذه المشكلة، فقم بإيقاف تشغيل المشغل ثم أعد تشغيله بالضبط على الزر POWER، أو أفضل سلك التيار الكهربائي المتردد ثم أعد توصيله بمفخذ التيار الكهربائي المتردد. سيعمل المشغل على نحو طبيعي. - في حالة حدوث تكثف داخل المشغل نتيجة حدوث تغييرات شديدة في درجات الحرارة، ربما لا يعمل المشغل في درجو سليم. في حالة حدوث هذه المشكلة، اترك المشغل في درجة حرارة الغرفة حتى يصبح الجزء الداخلي من المشغل جافاً ومستعداً للعمل. 	<ul style="list-style-type: none"> - تنبيه: قد يؤدي استخدام أزرار التحكم أو إعدادات الضبط أو تنفيذ إجراءات بخلاف الواردة بهذا الدليل إلى التعرض للإشعاع الخطير.

ميزات عامة

٢. الإعداد	٤. الإعداد
<ul style="list-style-type: none"> - يجب عدم تنظيف القرص باستخدام مواد الرش الخاصة بمسح التسيجيلات أو البنزين أو سائل تخفيف الدهان أو غيرها من المذيبات المتطايرة الأخرى والتي قد تتسبب في حدوث تلف بسطح القرص. - يجب عدم لمس سطح إشارات القرص. امسك القرص من إحدى الحواف والفتحة الموجودة بالمتنصف. - امسح الأتربة برفق ولا تمم محلولاً امسح مستخدماً قطعة قماش دهلياً وإيلاً فوق القرص. 	<ul style="list-style-type: none"> - يجب عدم تنظيف القرص باستخدام مواد الرش الخاصة بمسح التسيجيلات أو البنزين أو سائل تخفيف الدهان أو غيرها من المذيبات المتطايرة الأخرى والتي قد تتسبب في حدوث تلف بسطح القرص. - يجب عدم لمس سطح إشارات القرص. امسك القرص من إحدى الحواف والفتحة الموجودة بالمتنصف. - امسح الأتربة برفق ولا تمم محلولاً امسح مستخدماً قطعة قماش دهلياً وإيلاً فوق القرص.
٣. المعلومات البينية	٥. المعلومات البينية
<ul style="list-style-type: none"> - تحتوي البطارية المستخدمة في هذا المنتج على مواد كيميائية ضارة بالبيئة. - إذا، يرجى التخلص من البطاريات بالطريقة الصحيحة، وفقاً للتوانين الفيدرالية والدولية والمحلية. 	<ul style="list-style-type: none"> - وحدة المنتج المرفقة بهذا الدليل مخصصة وفقاً لحقوق ملكية فكرية محددة لشركات أطراف أخرى. يقتصر هذا الترخيص على الاستخدام الخاص غير التجاري بواسطة العميل النهائي المنتفع من المحتويات المخصصة. ولا توجد حقوق ممنوعة لاستخدام هذا الجهاز لأغراض تجارية. لا يغطي هذا الترخيص أي وحدة منتج أخرى بخلاف هذه الوحدة، وكذلك لا يشمل الترخيص أي وحدة منتج أو عملية غير مخصصة لتطبيق ISO/OUR 11172-3 و ISO/OUR 13818-3 الترخيص فقط استخدم أي ترابع مرفقة بوحدة المنتج الحالية كذلك يغطي الترخيص فقط استخدام وحدة المنتج الحالية لتشغيل أو فك تشفير ملفات الصوت التي تتطابق مع ISO/OUR 11172-3 أو ISO/OUR 13818-3. لم يتم منح حقوق بموجب هذا الترخيص فيما يتعلق بميزات المنتج ووظائفه التي لا تطابق ISO/OUR 11172-3 أو ISO/OUR 13818-3.
٣. تنبيه	٥. تنبيه
<ul style="list-style-type: none"> - لم يتم تصميم المشغل ليتم استخدامه في أغراض صناعية ولكن لأغراض منزلية. هذا المنتج للاستخدام الشخصي فقط. - يجب عدم تعرض الجهاز لفطرات الماء أو رذاذ الماء كما لا يجب أن يوضع عليه أشياء تحتوي على سوائل مثل أنية الزهور. - يمكن أن تؤثر العوامل الخارجية كالبرق والكهرباء الساكنة على التشغيل الطبيعي لهذا المشغل. إذا واجهت هذه المشكلة، فقم بإيقاف تشغيل المشغل ثم أعد تشغيله بالضبط على الزر POWER، أو أفضل سلك التيار الكهربائي المتردد ثم أعد توصيله بمفخذ التيار الكهربائي المتردد. سيعمل المشغل على نحو طبيعي. - في حالة حدوث تكثف داخل المشغل نتيجة حدوث تغييرات شديدة في درجات الحرارة، ربما لا يعمل المشغل في درجو سليم. في حالة حدوث هذه المشكلة، اترك المشغل في درجة حرارة الغرفة حتى يصبح الجزء الداخلي من المشغل جافاً ومستعداً للعمل. 	<ul style="list-style-type: none"> - تنبيه: قد يؤدي استخدام أزرار التحكم أو إعدادات الضبط أو تنفيذ إجراءات بخلاف الواردة بهذا الدليل إلى التعرض للإشعاع الخطير.

ملاحظة

- الأقراص التي لا يمكن تشغيلها مع هذا المسجل.
- DVD-ROM • DVD-RAM • CD-ROM • CD-I • CDD • CDI •
- ربما تتوقف القدرة على التشغيل على ظروف التسجيل.
- DVD-R أو DVD+R • CD-RW • DVD-RW أو DVD+RW (وضع V)
- قد تتمكن الوحدة من تشغيل بعض أقراص CD-R و CD-RW و DVD-R بسبب نوع القرص أو ظروف التسجيل.

الحماية من النسخ

يوجد العديد من أقراص DVD المزودة بشفرة للحماية من النسخ. ولهذا السبب، يجب عليك فقط توصيل مشغل أقراص DVD مباشرة بجهاز التلفاز وليس بأحد أجهزة الفيديو. حيث ينتج عن توصيل هذه الوحدة بجهاز فيديو ظهور صورة مشوهة من أقراص DVD المحمية ضد النسخ.

يتضمن هذا البند تقنية حماية ضد النسخ وهي محمية بموجب حقوق البراءات وحقوق الملكية الفكرية الأخرى بالولايات المتحدة الأمريكية وكذلك حقوق شركة ROVI. يُمنع منعاً باتاً القيام بهندسة عكسية أو التتكيك

مخرجات الاستعراض المتقدم (576p)

"يتعين على الممتلكين الانتباه إلى أنه ليست كل أجهزة التلفاز ذات دقة الوضوح العالية متوافقة تماماً مع هذا المنتج وقد تتسبب في ظهور عيوب مرئية في الصورة، في حالة ظهور مشكلات في صور الاستعراض المتقدم في الوضعين 576 يوصى أن يقوم المستخدم بتبديل الوصلة إلى خرج "التعريف القياسي". إذا كانت لديك أية أسئلة تتعلق بتوافق جهاز التلفاز مع هذا الطراز من مشغل أقراص DVD 576p، يرجى الاتصال بمرکز خدمة العملاء الخاص بـ SAMSUNG".

علامات القرص

رمز منطقة التشغيل	
نظام بث PAL في المملكة المتحدة وفرنسا وألمانيا وما إلى ذلك.	PAL
قرص دولبي الرقمي	DOLBY DIGITAL
قرص استريو	STEREO
قرص الصوت الرقمي	DIGITAL SOUND
قرص MP3	MP3

رقم المنطوق

يتم تمثيل كل من أقراص ومشغل أقراص DVD حسب المنطقة. ولابد أن تتوافق رموز المناطق حتى يمكن تشغيل القرص. في حالة عدم توافق الرموز، لن يتم تشغيل القرص. ويمكن العثور على رمز المنطقة لهذا المشغل على اللوحة الخلفية.

اعتماد DivX

DIVX

DivX Certified و DivX

والشعارات المرتبطة بها علامات تجارية لشركة

DivXNetwork, Inc. ويتم استخدامها بموجب

ترخيص.

"برنامج DivX مرخص له تشغيل لقطات الفيديو من DivX،

بما في ذلك المحتوى المتميز."

مغطى بوحدة أكثر من براءات الاختراع الأمريكية التالية :

7,519,274 ، 7,515,710 ، 7,460,668 ، 7,295,673

الوصف

أزرار تحكم اللوحة الأمامية

DVD-D530



DVD-D360K
DVD-D530K



1. درج الأقراص

ضع القرص هنا.

2. DISPLAY

اضغط على هذا الزر لفتح/إغلاق الأقراص وإغلاقها.

3. OPEN/CLOSE

اضغط على هذا الزر لفتح/إغلاق الأقراص وإغلاقها.

4. STOP

لإيقاف تشغيل القرص.

5. PLAY/PAUSE

لبدء تشغيل القرص أو إيقاف تشغيله مؤقتاً.

6. POWER ON/OFF

قم بالتشغيل/إيقاف التشغيل وسيتم تشغيل/إيقاف تشغيل المشغل.

7. مضيف USB


توصيل كاميرا الصور الثابتة الرقمية أو مشغل MP3 أو بطاقة الذاكرة أو قارئ البطاقة أو وحدات التخزين الأخرى القابلة للإزالة.

8. (DVD-D530K/DVD-D360K) MIC


لتوصيل البكراتون للتغليط وطلايف كاروكي.

استكشاف وحدة التحكم عن بُعد


DVD-D530K

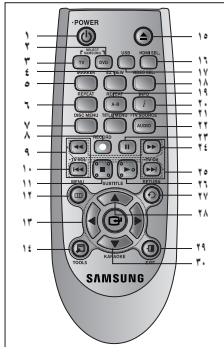

DVD-D530

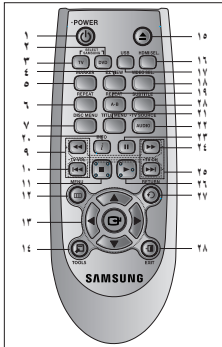

DVD-D360K

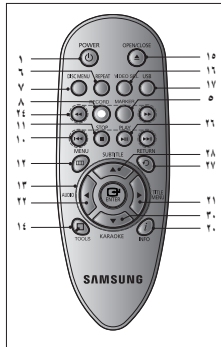

١. الزر **POWER** لمشغل أقراص DVD لتشغيل الوحدة أو إيقاف تشغيلها.
٢. زر **DVD (DVD-D530K/DVD-D530)** لضغط على هذا الزر عند استخدام مشغل DVD.
٣. زر **TV (DVD-D530K/DVD-D530)** لضغط على هذا الزر لتشغيل التلفاز.
٤. زر **EZ VIEW (DVD-D530K/DVD-D530)** يمكن ضبط نسبة الإرتفاع إلى العرض بسهولة وفقاً لحجم شاشة التلفزيون (٩:١٦ أو ٤:٣).
٥. زر العلامة **(MARKER)**
٦. زر **REPEAT** يفتح هذا الزر تكرر تشغيل عنوان أو فصل أو مادة مسجلة أو قرص.
٧. زر **DISC MENU** لإظهار قائمة الأقراص
٨. زر **RECORD (DVD-D530K/DVD-D360K)** تستخدم للسجل ببطريقة كاريوكي
٩. زر **TV VOL (+, -) (الزيادة، التخفيض) (DVD-D530K/DVD-D530)** التحكم في مستوى الصوت
١٠. زر **SKIP (◀▶▶▶)** يستخدمان لتخطي العنوان الفصل أو المدة المسجلة.
١١. زر **STOP (■)**
١٢. زر **MENU** لإظهار قائمة مشغل أقراص DVD.
١٣. زر **ENTER ◀▶▶▶** يعمل هذا الزر كمفتاح تبديل.
١٤. زر **TOOLS** لعرض وضع القرص الحالي
١٥. زر **OPEN/CLOSE (▲)** يستخدم لعرض تخطيط معلومات التشغيل
١٦. زر **HDMI SEL. (DVD-D530K/DVD-D530)** لفتح درج الأقراص وإغلاقه.

التوصيلات

اختيار إحدى التوصيلات

١. لضبط دقة خرج HDMI.
١٧. زر **USB** لتغيير صورة DVD.
١٨. زر **VIDEO SEL.** لتغيير وضع خرج الفيديو.
١٩. زر **REPEAT A-B (DVD-D530K/DVD-D530)**
٢٠. زر **INFO** كما يسمح لك أيضاً باستخدام وظيفة العرض (Display).
٢١. زر **TITLE MENU** لإظهار قائمة العناوين.
٢٢. زر **TV SOURCE/AUDIO** استخدم هذا الوصول إلى وظائف الصوت المتعددة الموجودة على القرص. انقر على هذا الزر لاختيار مصدر التلفاز المتاح (وضع التلفاز).
٢٣. زر **PAUSE (■)**
٢٤. زر **SEARCH (◀▶▶▶)** يتيح لك البحث إلى الأمام/الخلف خلال القرص.
٢٥. زر **TV CH (↵, ↶) (قناة التلفاز) (DVD-D530K/DVD-D530)** لتحديد القناة.
٢٦. زر **PLAY (▶) (▶▶▶▶)** لبدء التشغيل.
٢٧. زر **RETURN** للرجوع إلى قائمة سابقة.
٢٨. زر **SUBTITLE (▲)**
٢٩. زر **EXIT (خروج) (DVD-D530K/DVD-D530)** للخروج من القائمة التي تظهر على الشاشة.
٣٠. زر **KARAOKE (▼) (DVD-D530K/DVD-D360K)** للوصول إلى قائمة كاريوكي. (keycon, echo mic vol)

ملاحظة

- قد يحدث تشويش إذا كان كابل الصوت شديد القرب من كابل التيار الكهربائي.
- إذا أردت التوصيل بمضخم صوت ، فتر جر إلى جوع إلى صفحة توصيل مضخم الصوت.
- يختلف عند أطراف التوصيل وصل وموضعها حسب جهاز التلفاز . يرجى الرجوع إلى دليل المستخدم الخاص بالتلفاز.
- في حالة وجود طرف توصيل دخل صوت واحد بجهاز التلفاز ، تم بتوصيله بطرف توصيل [AUDIO OUT] [الأيسر] [الأيمن] الموجود بمشغل أقراص DVD.
- في حالة الضغط على زر VIDEO SEL. عندما يكون مشغل DVD في وضع التوقف أو في حالة عدم إدخال أي قرص ، يتغير الوضع خرج الفيديو بالتسلسل التالي : (P-SCAN ← I-SCAN).

B. التوصيل بجهاز تلفاز (تداخل/متقدم)

١. باستخدام كابلات فيديو المكون ، تم بتوصيل طرف توصيل **COMPONENT VIDEO OUT** الموجود بالجذء الخلفي لمشغل أقراص DVD بطرف توصيل **COMPONENT IN** بجهاز التلفاز.
٢. باستخدام كابلات الصوت ، تم بتوصيل طرف في التوصيل **AUDIO OUT (الأيمن والأحمر)** بالجذء الخلفي من مشغل أقراص 5.1 (القناة 1CH 5.1 والأيمن) الخاص أقراص DVD بطرفي توصيل **AUDIO IN (الأيمن والأحمر)** بجهاز التلفاز . تم بتشغيل مشغل أقراص DVD والتلفاز.
٣. اضبط خرج الفيديو على P-SCAN في قائمة Display Setup يمكن استخدام الزر **VIDEO SEL.** لتغيير وضع خرج الفيديو.

ملاحظة

- ما هو "الاستعراض المتقدم".
- يتميز الاستعراض المتقدم بأنه يتضمن خطوط استعراض ضعف خطوط الاستعراض الخاصة بطريقة خرج التداخل. يمكن أن تمنحك طريقة الاستعراض المتقدم جودة صورة أوضح وأفضل.

C. التوصيل بالتلفزيون باستخدام مقبس HDMI/DVI (DVD-D530K/DVD-D530)

١. باستخدام كابل HDMI-HDMI/HDMI-DVI ، تم بتوصيل طرف توصيل **HDMI OUT** الموجود بالجذء الخلفي لمشغل أقراص DVD بطرف توصيل **HDMI/DVI IN** بجهاز التلفزيون.
٢. باستخدام كابلات الصوت ، تم بتوصيل طرف في التوصيل **AUDIO OUT (الأيمن والأحمر)** بالجذء الخلفي من مشغل أقراص 5.1 (القناة 1CH 5.1 والأيمن) الخاص أقراص DVD بطرفي توصيل **AUDIO IN (الأيمن والأحمر)** بجهاز التلفزيون . تم بتشغيل مشغل أقراص DVD والتلفاز.
٣. اضبط على محد الدخل بوحدة التكم عن بعد الخاصة بالتلفزيون حتى تظهر إشارة HDMI/DVI الصادرة من مشغل DVD على شاشة التلفزيون.

مواصفات HDMI VIDEO (DVD-D530K/DVD-D530)

- عند الضغط على الزر **HDMI SEL.** يتم تحديد 480p ، 576p ، 720p ، 1080i و 1080p بالتتابع.
- يؤدي الضغط على الزر **HDMI SEL.** لأول مرة إلى ظهور الدقة الحالية
- أما من خلال الضغط عليه للمرة الثانية ، يمكن تغيير دقة خرج HDMI.
- قد لا تعمل نقلات خرج HDMI معينة ، وذلك حسب التلفزيون المتوفر لديك.
- يرجى الرجوع إلى دليل المستخدم الخاص بالتلفزيون.
- في حالة توصيل كابل HDMI أو HDMI-DVI بالتلفاز ، يتم ضبط خرج مشغل DVD على HDMI/DVI في غضون ١٠ ثوان.
- في حالة ضبط دقة خرج HDMI على 720p ، 1080i أو 1080p ، يوفر خرج HDMI جودة أفضل للمسورة.
- في حالة توصيل كابل HDMI بين تلفاز سامسونج ، تستطيع تشغيل مشغل DVD بسهولة باستخدام وحدة التحكم عن بعد الخاصة بالتلفاز (يتوافر هذا فقط مع تلفاز سامسونج الذي يدعم وظيفة Anynet+(HDMI-CEC).
- يرجى التحقق من وجود شعار Anynet+ (في حالة وجود شعار Anynet+ ، فهذا يعني أن الجهاز يدعم وظيفة Anynet+).

HDMI (واجهة الوسائط المتعددة عالية الوضوح) (DVD-D530K/DVD-D530)

- HDMI عبارة عن واجهة تسمح بالنقل الرقمي لبيانات الفيديو والصوت باستخدام موصل واحد فقط .
- HDMI يمكن استخدام HDMI ينقل مشغل DVD إشارة صوت و فيديو رقمية ويعرض صورة زاهية على التلفزيون المزود بمقبس دخل HDMI.
- وصف وصلة HDMI**
- موصل HDMI - كلما عيرة عن بيانات صوت رقمية وبيانات فيديو غير مضغوطة (LPCM) أو بيانات تدفق وحدات البت).
- إشارة رقمية نقية فقط إلى التلفزيون على الرغم من أن المشغل يستخدم كابل HDMI ، يخرج المشغل.
- وإذا كان التلفزيون لا يدعم HDCP (حماية المحتوى الرقمي عالي النطاق) ، يظهر تشويش أبيض اللون على الشاشة.
- لماذا تستخدم شركة سامسونج مقبسة HDMI**
- ال رغم من ذلك ، عند تشغيل أحد أقراص DVD ، فإن البيانات التي يتم تتطلب أجهزة التلفزيون التناظرية إشارة فيديو/صوت تناظرية. وعلى نقاها إلا التلفزيون تكون بيانات رقمية . ومن ثم يتعين استخدام محول رقمي إلى تناظري (في مشغل DVD) أو محول تناظري إلى رقمي

الوظائف الأساسية

تشغيل القرص

قبل التشغيل

- بتشغيل جهاز التلفاز واضبطه على إدخال الفيديو الصحيح بالضغط على الزر TV/VIDEO بو حدة التحكم عن بُعد الخاصة بالتلفاز.

- في حالة تو صيل نظام صوت خارجي، قم بتشغيل نظام الصوت واضبطه على إدخال الصوت الصحيح.

بعد تو صيل المشغل، تظهر هذه الشاشة في المرة الأولى التي تضغط فيها على الزر **POWER** الحاص بمشغل أقرص DVD. إذا أردت اختيار على زر **▲/▼**، ثم اضغط على الزر **ENTER**. (تظهر هذه الشاشة فقط عند إحدى اللغات، فاضغط توصيل المشغل للمرة الأولى.) إذا لم يتم ضبط شاشة بدء التشغيل، فقد تتغير الإعدادات حينما تقوم بتشغيل إذا لم يتم ضبط شاشة بدء السبب، تأكد من اختيار اللغة المراد استخدامها بمجرد اختيار إحدى لغات القائمة، يمكنك تغييرها بالضغط على الزر **▶||▶** بالوحة الأمامية للوحة لمدة تزيد عن ٥ ثوانٍ مع وجود القرص في الوحدة. ثم، يظهر إطار **SELECT MENU** مرة أخرى حيث يمكنك إعادة تعيين اللغة المفضلة إليك.

استخدام وظيفتي البحث والتخطي

أثناء التشغيل، يمكنك البحث بسرعة عن فصل أو مادة مسجلة واستعراض وظيفة التخطي للتحديد التالي إلى التحديد التالي.

البحث جلالاً أو مادة مسجلة

البحث جلالاً أو مادة مسجلة **SEARCH** (▶▶ أو ◀◀) بوحدة التحكم بعد

ملاحظة

- قد تختلف السرعات الكبيرة في هذه الوظيفة عن سرعة التشغيل الفعلية.
- لا يصدر أي صوت أثناء وضع البحث. (باستثناء الأقرع الفعلية.)

DVD	2X, 4X, 8X, 16X, 32X
CD	2X, 4X, 8X, 16X, 32X
VCD	4X, 8X

تخطي الواد المسجلة

أثناء تدوير، اضغط على الزر **SKIP** (▶▶ أو ◀◀)

- عند تشغيل قرص DVD، باقمتنا اضغط على الزر **SKIP** (▶▶) فينتقل إلى الفصل التالي. في حالة الضغط على الزر **SKIP** (◀◀) ينتقل إلى الفصل الذي يسبقه. اضغط على الزر **SKIP** (▶▶) فينتقل إلى الفصل التالي.

- عند تشغيل قرص VCD طاب إذا ضغطت على الزر **SKIP** (▶▶)، فينتقل إلى اللدة المسجلة التالية. في حالة الضغط على الزر **SKIP** (◀◀) ينتقل إلى بداية اللدة المسجلة. تؤدي ضغطاً آخرى عليه إلى انتقاله إلى بداية مادة مسجلة سابقة.

- إذا تجاوزت مدة اللدة الحقيقية عند تشغيل قرص VCD وقمت بالضغط على الزر (▶▶)، فينتقل إلى الأمام عقده دقيق. إذا ضغطت على الزر (◀◀) فينتقل إلى الخلف عقده دقيق.



(في التلفزيون). أثناء عملية التحويل، تنخفض جودة الصورة بسبب التشويش وفقدان الإشارة. تعد تقنية **DVI** هي الأصل حيث إنها لا تتطلب تحويل رقمي/تناظري وتنتقل إشارة رقمية من المشغل إلى التلفزيون.

ما المقصود بـ HDMI

إن **HDCP** (حماية المحتوى الرقمي عالي النطاق) عبارة عن نظام يستخدم لحماية محتويات **DVD** التي يتم إخراجها عبر **DVI** بحيث لا يتم نسخها. ويوفر هذا النظام اتصالاً رقمياً آمناً بين مصدر فيديو (الكمبيوتر أو **DVD** وما إلى ذلك) وجهاز العرض (التلفزيون وآلة العرض وما إلى ذلك). ويتم تشفير المحتوى في الجهاز المصدر لمنع إنشاء نسخ غير مرخصة.

D. التوصيل بنظام صوت (مضخم صوت ثنائي القنوات/مضخم القنوات Dolby Digital أو MPEG2)

1. باستخدام كبلات الصوت، قم بتوصيل طرفي التوصيل **AUDIO OUT (الأبيض والأحمر)** بالجزء الخلفي من مشغل أو أقراص 5.1 (اللقطة 1CH). و الأبيض) الخاص بأقراص **DVD** بطرفي توصيل **AUDIO IN (الأبيض والأحمر)** بمضخم الصوت. قم بتشغيل مشغل أقراص **DVD** والتلفاز. إذا كنت تستخدم كابلًا محوريين، فقم بتوصيل طرف توصيل **DIGITAL AUDIO OUT (COAXIAL)** الموجود بالجزء الخلفي لمشغل أقراص **DVD** بطرف توصيل **DIGITAL AUDIO IN (COAXIAL)** لمضخم الصوت.
2. باستخدام كابل (كبلات) إشارات الفيديو، قم بتوصيل أطراف التوصيل **VIDEO** أو **COMPONENT OUT** بالجزء الخلفي من مشغل أقراص **DVD** بطرف توصيل **VIDEO** أو **COMPONENT IN** بجهاز التلفاز.
3. قم بتشغيل مشغل أقراص **DVD** والتلفاز ومضخم الصوت.
4. اضغط على زر تحديد الدخل الخاص بمضخم الصوت لتحديد الدخل الخارجي لسماح الصوت من مشغل **DVD**.

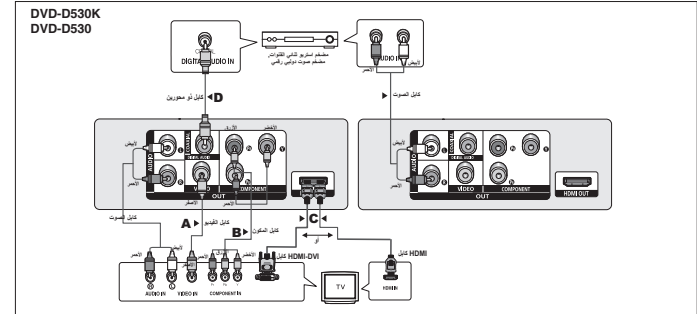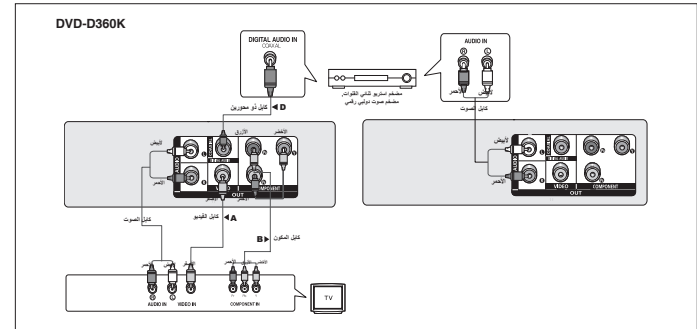

استخدام وظيفة العرض

عند تشغيل قرص DVD/VCD/MPEG4

١. أثناء لتغيل، ضغط على الزر **TOOLS** بوحدة التحكم عن بعد.
٢. اضغط على زر **▲/▼** لتحديد العنصر المطلوب.
٣. اضغط على زر **◀/▶** لإجراء إعد
٤. لإخفاء الشاشة، اضغط على الزر **TOOLS** مرة أخرى.

تظهر الوظائف عند استخدام وظيفة العرض (Display) في الجدول أدناه

	الوصول إلى العنوان المطلوب في حالة وجود أكثر من عنوان. على القرص. على سبيل المثال، في حالة وجود أكثر من فيلم على قرص DVD، يتم التعرف على كل فيلم.
	يتم تسجيل معظم أقراص DVD في فصول حتى يمكنك العثور على مقطع محدد (تتبع المواد المسجلة على قرص صوت مضغوط).
	لاتخاذ تشغيل الفيلم من الوقت المطلوب. يجب إدخال وقت البدء كمرجع. لاتعمل وظيفة البحث عن الوقت مع بعض الأقراص.
	للإشارة إلى لغة المادة الصوتية المسجلة للفيلم. في المثال، يتم تشغيل المادة الصوتية المسجلة في صوت English 5.1CH. عيكن أن يحتوي أقراص DVD على ما يصل إلى ثمان مواد صوتية مسجلة مختلفة.
	للإشارة إلى لغات الترجمة المصاحبة المتوفرة على القرص. يمكنك من اختيار لغات الترجمة المصاحبة أو إيقاف تشغيلها من الشاشة، إذا كنت تفضل ذلك. يمكن أن يحتوي قرص DVD على ما يصل إلى ٣٢ ترجمة مصاحبة مختلفة.
	تستخدم وظيفة EZ View (عرض EZ) لغير خبراء العرض إلى الأمام على قرص DVD
	اضغط على الزر ENTER لتنشيط وظيفة Zoom (التكبير).
	الوصول إلى الوظيفة Angle المطلوبة بعض أقراص DVD بواسطة زوايا أكثر بكثير مما في أشرطة.

استخدام قائمتي العناوين والأقراص

١. أثناء تشغيل قرص DVD، اضغط على الزر **TITLE MENU/DISC MENU** بوحدة التحكم عن بعد.

ملاحظة

- قد لا تعمل وظيفة Title Menu/Disc menu وفقاً للقرص.
- كذلك، يمكنك استخدام قائمة الأقراص، باستخدام الزر **MENU DISC** بوحدة التحكم عن بعد.
- سيتم عرض وظيفة Title Menu فقط في حالة وجود عناوين على الأقراص.

تكرار التشغيل

تستطيع تكرار تشغيل المادة المسجلة أو الفصل أو العنوا ان الحالي أو قسم مختار (A-B) أو القرص بأكمله.

عند تشغيل قرص DVD/VCD

١. اضغط على الزر **REPEAT** بوحدة التحكم عن بعد. تظهر شاشة التكرار
٢. اضغط على الزرين **REPEAT** أو **▲/▼** لتغيير وضع التشغيل. يكرر قرص DVD التشغيل حسب الفصل أو العنوان.

- إيقاف التشغيل

Title (العنوان) : لتكرار العنوان الحالي تشغيلة.

Chapter - (باب) : لتكرار الفصل الحالي تشغيلة.
REPEAT A-B (تكرار A-B) (DVD-D360K)
A-B Repeat (DVD-D360K)

١. أثناء لتغيل، ضغط على الزر **REPEAT** بوحدة التحكم عن بعد.
٢. اسخدم الزرين **▲/▼** لتحديد **REPEAT A-B** ، ثم اضغط على **▶** أو الزر **ENTER**
٣. اضغط على لزر **ENTER** عند الموضع المطلوب بدء تكرار التشغيل عند (A).
٤. اضغط على لزر **ENTER** عند الموضع المطلوب إيقاف تكرار التشغيل عند (B).

A-B Repeat (DVD-D530K/DVD-D530)

١. أثناء لتغيل، ضغط على الزر **REPEAT A-B** بوحدة التحكم عن بعد.
٢. اضغط على لزر **REPEAT A-B** عند الموضع المطلوب بدء تكرار التشغيل عند (A).
٣. اضغط على لزر **REPEAT A-B** عند الموضع المطلوب إيقاف تكرار التشغيل عند (B).
٣. للرجوع إلى التشغيل العادي، اضغط على الزر **REPEAT A-B** (الشاشة ر: سالة تكرار إيقاف تشغيل (Repeat: Off)).

ملاحظة

- لا تسمح وظيفة AB REPEAT لك بضبط النقطة (B) حتى انقضاء ه ثوان على الأقل من التشغيل بعد ضبط النقطة (A).
- حسب القرص، ربما لا تعمل وظيفة Repeat.

التشغيل البطيء

تتيح لك هذه الميزة التكرار البطيء للمشاهد المحتوية على لقطات رياضية والحركة والأوتامو سيقية التي تعمل وغيرها بحيث يمكنك دراستها عن قرب.

عند تشغيل قرص DVD

١. أثناء التشغيل، اضغط على الزر **PAUSE/PLAY (II)** .
٢. اضغط على الزر **SEARCH (◀▶▶▶)** لاختيار سرعة التشغيل بين ٢/١ و ٤/١ و ٨/١ و ١٦/١ و ٢/١ للسرعات العادية أثناء الوضع PAUSE. إذا أردت التشغيل العادي ، اضغط على زر PLAY (تشغيل).

الوظائف المتقدمة

ضبط نسبة الارتفاع إلى العرض (EZ View)

للتشغيل باستخدام نسبة الارتفاع إلى العرض (DVD)

١. اضغط على الزر **EZ VIEW/TOOLS** بوحدة التحكم عن بعد. تظهر شاشة التكرار
٢. اضغط زر عرض **EZ VIEW** أو **▲/▼** لاختيار حجم الشاشة. في كل مرة تضغط فيها زر هت **◀/▶** أو **▲/▼** يتغير حجم الشاشة.
٣. اضغط زر خروج **EXIT/RETURN** للخروج من عرض هت (EZ VIEW)

إذا كنت تستخدم تلفازاً بنسبة الارتفاع إلى العرض ٩:١٦

للأقراص ذات نسبة الارتفاع إلى العرض ٩:١٦
 4:3 Letter Box -
 4:3 Pan Scan -
 SCREEN FIT -
 ZOOM FIT -

للأقراص التي تعمل بنسبة الارتفاع إلى العرض ٣:٤
 Normal Wide -
 SCREEN FIT -
 ZOOM FIT -
 Vertical Fit -

ملاحظة

قد تؤدي هذه الوظيفة إلى نتائج مختلفة حسب نوع القرص.

تحديد لغة الصوت

يمكنك تحديد لغة الصوت المطلوبة على نحو سريع وسهل باستخدام الزر AUDIO.

استخدام الزر (DVD/VCD/MPEG4) AUDIO

1. اضغط على الزر ◀/AUDIO. يتغير الصوت عند الضغط على الزر بشكل متكرر. يمكنك تغيير لغة الصوت بالضغط على زر صوتي AUDIO أو ▲/▼.

- يتم عرض لغات الصوت باستخدام الاختصارات.

2. لإزالة الرمز AUDIO، اضغط على الزر EXIT/RETURN.

ملاحظة

- تعتمد هذه الوظيفة على لغات الصوت التي تم تشغيلها على القرص وقد لا تعمل.

- يمكن أن يحتوي قرص DVD على ما يصل إلى ٨ لغات صوت.

تحديد لغة الترجمة المصاحبة

يمكنك تحديد الترجمة المصاحبة المطلوبة على نحو سريع باستخدام الزر SUBTITLE.

استخدام الزر (DVD/MPEG4) SUBTITLE

1. اضغط على الزر (▲) SUBTITLE. يتم عرض لغات الترجمة المصاحبة المتوفرة باستخدام الاختصارات.
2. اضغط زر (▲) SUBTITLE أو ▼/▲ لتغيير اللغة. في كل مرة تضغط فيها على زر الترجمة (▲) SUBTITLE أو ▼/▲، تتغير اللغة.
3. لإزالة الرمز SUBTITLE، اضغط على الزر EXIT/RETURN.

ملاحظة

- يتم تغيير الترجمة المصاحبة عند الضغط

- قد تحتاج إلى تغيير الترجمة المصاحبة المطلوبة في قائمة Disc Menu حسب نوع القرص. اضغط على الزر DISC MENU.

- تعتمد هذه الوظيفة على لغات الترجمة المصاحبة التي تم تشغيلها على القرص وقد لا تعمل وقد لا تعمل على كافة أقراص DVD.

- يمكن أن يحتوي قرص DVD على ما يصل إلى ٣٢ لغة للترجمة المصاحبة.

تغيير زاوية الكاميرا

إذا كان قرص DVD يحتوي على زوايا متعددة لمشهد معين، يمكنك استخدام وظيفة ANGLE.

استخدام وظيفة ANGLE (أقراص DVD)

إذا كان القرص يحتوي على زوايا متعددة، فستظهر الوظيفة ANGLE على الشاشة.

1. أثناء وضع التشغيل أو الإيقاف المؤقت، اضغط على الزر TOOLS بوحدة التحكم عن بُعد.
2. اضغط على الزرين ▼/▲ لتحديد [تغيير زاوية الكاميرا]. يمكنك استخدام أزرار الأرقام على وحدة التحكم عن بُعد لتحديد الزاوية المطلوبة.

استخدام وظيفة العلامات

تتيح لك هذه البزة وضع علامة على أجزاء قرص DVD أو قرص VCD (وضع Menu Off) بحيث يمكنك الوصول إليها بسرعة في وقت لاحق.

استخدام وظيفة (أقراص DVD/VCD)

1. أثناء وضع التشغيل أو الإيقاف المؤقت، اضغط على الزر MARKER بوحدة التحكم عن بُعد.
2. عند الوصول إلى مشهد المطلوب تمييزه، اضغط على الزرين ▶/◀ للزر ▼/▲. ثم اضغط على MARKER. يمكن تمييز حتى ١٢ مشهد في المرة الواحدة.

ملاحظة

- قد لا تعمل وظيفة Bookmark حسب نوع القرص

استدعاء مشهد مميز بعلامة

1. أثناء وضع التشغيل أو الإيقاف المؤقت، اضغط على الزر MARKER بوحدة التحكم عن بُعد.
2. اضغط على الزرين ▶/◀ أو الزر ▼/▲ لتحديد مشهد مميز بعلامة.
3. اضغط على الزر (▶) PLAY لتخطي المشهد المميز بعلامة

مسح علامة

1. أثناء وضع التشغيل أو الإيقاف المؤقت، اضغط على الزر MARKER بوحدة التحكم عن بُعد.
2. اضغط على الزرين ▶/◀ أو الزر ▼/▲ لتحديد رقم العلامة المطلوب حذفها.
3. اضغط على الزر ENTER لحذف رقم العلامة.

استخدام وظيفة التكبير/التصغير

استخدام وظيفة Zoom (أقراص DVD/VCD)

1. أثناء وضع التشغيل أو الإيقاف المؤقت، اضغط على الزر الزر TOOLS بوحدة التحكم عن بُعد.
2. اضغط على الزرين ▼/▲ لتحديد [تصغير] ، ثم اضغط على الزر ENTER لتكبير بنسبة X١، X٢، X٣، X٤ بالترتيب.

قائمة مقاطع ملفات MPEG4/JPEG/WMA/MP3/أقراص المضغوطة

تحتوي أقراص الصوت المضغوطة أو الأ أقراص التي تتضمن ملفات MPEG4/JPEG/WMA/MP3 على أغن خاصة و/أو الصور التي يمكن تنظيمها في مجلدات على النحو الموضح أدناه. وهي تشابه مع طريقة استخدام الكمبيوتر لوضع الملفات في مجلدات مختلفة.

لدخول إلى هذه المجلدات والملفات التي تشمل عليها، اتبع الخطوات التالية :

1. افتح درج الأقراص. ضع القرص في الدرج.
2. أغلق الدرج. تعلق العلية وتظهر نافذة قائمة المجلد الرئيسي (Parent Folder Menu) (الصورة التي تظهر أعلى الصفحة). تحتوي المجلدات الرئيسية على جميع المجلدات الشبيهة (Peer) التي تضم نفس نوع المحتوى الموسيقي، ملفات الفيديو، الصور، الخ.
3. اضغط أزرار ◀/▶/◀/▶ لاختيار المجلد الرئيسي ثم اضغط زر إدخال(ENTER) تظهر شاشة المجلدات الشبيهة. تضم المجلدات الشبيهة جميع المجلدات التي تحتوي على نفس نوع المحتوى (ملفات فيديو، موسيقى، صور، الخ) الموجود بالمجلدات الرئيسية.

تحديد انجلد

يمكن تحديد المجلد في كل من الوضع Stop أو Play.

- تحديد المجلد الرئيسي

اضغط على الزر RETURN للانتقال إلى المجلد الرئيسي، أو اضغط على الزرين ▼/▲ لتحديد "...". ثم اضغط على ENTER كي تنتقل إلى المجلد الرئيسي.

- تحديد المجلد التظير

اضغط على الزرين ▼/▲ لتحديد المجلد المطلوب ثم اضغط على الزر ENTER.

- تحديد المجلد الفرعي

اضغط على الزرين ▼/▲ لتحديد المجلد المطلوب ثم اضغط على ENTER.

تشغيل صوت WMA/MP3/القرص المضغوط

1. افتح درج الأقراص. ضع القرص في الدرج. أغلق الدرج.
2. اضغط على الزرين ▶/◀ لتحديد قائمة الموسيقى ثم اضغط على الزر ENTER. اضغط على الزرين ▼/▲ أو الزرين لتحديد ملف أغنية ثم اضغط على ENTER (إدخال) لبداء تشغيل الملف الأغنية.



التكرار والتشغيل العشوائي

اضغط على الزر **REPEAT** لتغيير وضع التشغيل. توجد أربعة أوضاع تشغيل **Off** و **Track** و **Folder** و **Random**.

Off (إيقاف التشغيل) (⏏): تشغيل عادي

Track (مقطع موسيقي) (🔍): لتكرار ملف الأغنية الحالي.

Folder (مجلد) (📁): لتكرار ملفات الأغاني المتشابهة في الامتداد بترتيب عشوائي.

Random (عشوائي) (🎲): سيتم تشغيل ملفات الأغاني المطابقة في الامتداد بترتيب عشوائي.

لا ستتفاد التشغيل العادي، اضغط على الزر **REPEAT** حتى تكرر : إيقاف (Repeat: Off).

ملف MP3/WMA بقرص CD-R

عند تسجيل ملفات **MP3** أو **WMA** على قرص **CDR** يرجى الرجوع إلى ما يلي.

- يجب أن تكون ملفات **MP3** أو **WMA** بتسقيص **ISO 9660** أو **JOLiet**.

يتوافق تسقيص **ISO 9660** و **Joliet** مع نظام تشغيل **Microsoft DOS** و **Microsoft Windows** ونظام التشغيل

Apple Mac وهو التتسيق الأكثر استخداماً .

- عند تسمية ملفات **MP3** أو **WMA**، يجب أن لا يتجاوز الاسم ٨ حروف ويجب إدخال "mp3." و "wma." كامتداد الملف.

التتسيق العام لاسم : Title.mp3 أو Title.wma. عند تكوين العنوان، تأكد من استخدام ٨ حروف أو أقل وعدم وجود مسافات في

الاسم وتجنب استخدام الحروف الخاصة بما في ذلك : (.,/ \ : * " < > =).

- استخدم معدل نقل لك ضغط لا يقل عن ١٢٨ كيلو بايت في الثانية عند تسجيل ملفات **MP3**

تعتمد جودة صوت ملفات **MP3** بشكل أساسي على معدل الضغط/نك الضغط المحدد. يتطلب الحصول على صوت قرص الصوت المضغوط توفر معدل عينة

تناظري/رقمي، بما يعني التحويل إلى تسقيص **MP3**، بما لا يقل عن ١٢٨ كيلو بايت في الثانية وحتى ١٦٠ كيلو بايت في الثانية. بينما لا يؤدي اختيار المعدلات

الأعلى، مثل ١٩٢ كيلو بايت في الثانية أو مزيد، إلى الحصول على جودة صوت أفضل إلا في الحالات النادرة. وبالعكس، لن يتم تشغيل الملفات ذات

معدل لك الضغط الذي يقل عن ١٢٨ كيلو بايت في الثانية بشكل صحيح.

- استخدم معدل نقل لك ضغط لا يقل عن ٦٤ كيلوبايت في الثانية عند تسجيل ملفات **WMA**

تعتمد جودة صوت ملفات **WMA** بشكل أساسي على معدل الضغط/نك الضغط المحدد. يتطلب الحصول على صوت قرص الصوت المضغوط توفر معدل

عينة تناظري/رقمي، بما يعني التحويل إلى تسقيص **WMA**، بما لا يقل عن ٦٤ كيلو بايت في الثانية وحتى ١٩٢ كيلو بايت في الثانية. وعلى العكس، لن يتم

تشغيل لملفات **WMA** أكبر من ٣٠ كيلو بايت في الثانية بشكل صحيح. معدل العينات الذي يمكن دمه

- لا تسجيل ملفات **MP3** المحمية بموجب حقوق الطبع والنشر.

تم تشفير بعض الملفات "المحمية" وحمايتها بالرموز لمنع النسخ غير القانوني. تنتمي هذه الملفات إلى الأنواع الآتية : Windows Media™

(علامة تجارية مسجلة لشركة Microsoft Inc) و SDMI™ (علامة تجارية مسجلة للشركة SDMI Foundation). لا يمكنك نسخ مثل هذه الملفات.

- هام :

لا يمكن اعتبار التوصيات المذكورة أعلاه ضماناً بأن مشغل أقراص **DVD** سيقيم بتشغيل تسجيلات **MP3** أو تأكيداً على جودة الصوت. يجب ملاحظة

أن بعض تقنيات وأساليب تسجيل ملفات **MP3** على أقراص **CD-Rs** تمنع التشغيل الأمثل لهذه الملفات باستخدام مشغل أقراص **DVD** (كخفض الصوت

و عجز المشغل في بعض الحالات عن قراءة الملفات).

- تستطيع هذه الوحدة تشغيل حتى ٥٠٠ ملف و ٥٠٠ مجلد كأكصى في القرص الواحد.

تشغيل MPEG4

وظيفة تشغيل MPEG4

يتم استخدم ملفات **AVI** بغرض احتواء بيانات فيديو وصوت. فلا يمكن تشغيل سوى الملفات بتسقيص **AVI** فقط ذات الامتداد "avi".

١. افتح درج الأقراص. ضع القرص في الد.ج. أغلق الدرج.

٢. اضغط على الزرين </> لتحديد قائمة ملفات الفيديو ، ثم اضغط على الزر **ENTER**. اضغط على الزرين </> لتحديد ملف **avi** (DivX/XviD) ،

ثم اضغط على الزر **ENTER**. اضغط على الزرين </> ، ثم اضغط على الزر **ENTER**.

تكرار تشغيل و استخدام وظيفة REPEAT A-B

١. اضغط على الزر **REPEAT** لتغيير وضع التشغيل. هناك ثلاثة أوضاع، مثل (إيقاف التشغيل) **Off** و (العنوان) **Title** و (مجلد) **Folder**.

- إيقاف التشغيل

- **Title (العنوان)** : لتكرار العنوان الحالي لتشغيله.

- **Folder (مجلد)** : لتكرار ملفات **AVI** ذات الامتداد المتماثل في المجلد الحالي.

استخدام وظيفة Repeat A-B (DVD-D360K)

١. أثناء لتغلي، اضغط على الزر **REPEAT** بوحدة التحكم عن بعد.

٢. اسخدم الزرين </> لتحديد **REPEAT A-B** ، ثم اضغط على > أو الزر **ENTER**

٣. اضغط على لزر **ENTER** عند الموضع المطلوب بدء تكرار التشغيل عنده (A).

٤. اضغط على لزر **ENTER** عند الموضع المطلوب إيقاف تكرار التشغيل عنده (B).

استخدام وظيفة Repeat A-B (DVD-D530K/DVD-D530)

١. أثناء لتغلي، اضغط على الزر **REPEAT A-B** بوحدة التحكم عن بعد.

٢. اضغط على لزر **REPEAT A-B** عند الموضع المطلوب بدء تكرار التشغيل عنده (A).

٣. اضغط على لزر **REPEAT A-B** عند الموضع المطلوب إيقاف تكرار التشغيل عنده (B).

- للرجوع إلى التشغيل العادي، اضغط على الزر **REPEAT A-B** الشاشة ٢: سالة تكرار إيقاف تشغيل (Repeat: Off).

وصف وظيفة MPEG4

الوظيفة	الوصف
Skip (⏮⏭)	أثناء التشغيل، اضغط على الزر << أو >> انتقل إلى المسار التالي أو السابق.
Search (⏮⏭)	أثناء التشغيل، اضغط على الزر SEARCH (<< أو >>) واضغط مرة أخرى للبحث بسرعة أكبر. يتيح البحث بسرعة أكبر في ملف AVI (X, Y, X, Y, X, Y, X, Y).
تشغيل بالحركة لبطيئة	يتيح البحث بسرعة أقل في ملف AVI (1/2, 1/4, 1/8, 1/16)
ZOOM	X=1/Normal X=2/بالتريبت

- قد لا تعمل هذه الوظائف وذلك حسب ملف **MPEG4**.

ملف AVI على قرص CD-R

يعدم هذا الجهاز كافة درجات الدقة حتى أقصى دقة معروضة أدناه.

DivX5
٧٢٠ × ٤٨٠ بمعدل ٣٠ إطاراً في الثانية
٧٢٠ × ٥٧٦ بمعدل ٣٥ إطاراً في الثانية
: أصص معدل نقل بيانات : ٤ ميجابايت في الثانية

تظهر رسائل تحذير محتملة خلال محاولة تشغيل ملف **DivX** :

- لا يوجد تصريح
- الملف المنشأ برمز تسجيل خطأ.

٢. بر برنامج تشفير غير مدعوم

- ملف بإصدارات وأنواع تشفير معينة (مثل: **MP4** و **AFS** و برامج تشفير ملكية أخرى) لا يدعمها هذا المشغل.

٣. دقة غير مدعومة

- الملف الذي يحتوي على درجات دقة أعلى من مواصفات المشغل غير مدعوم.

ملاحظة

- الدقة التي يمكن دمجها بواسطة الطراز DVD D530K/D530 تصل إلى 480 x 720 أو 30 إطاراً، 576 x 720 أو 25 إطاراً.
- قد يتعذر تشغيل بعض ملفات MPEG-4 التي تم إنشاؤها على كمبيوتر شخصي. وهذا يفسر سبب دعم نوع برنامج فك التشفير والإصدار والدقة الأعلى المتجولة للمواصفات.
- يدعم هذا الجهاز أقراص CD-R/RW المكتوبة بتنسيق MPEG4 والمتوافقة مع التنسيق "ISO9660".

تشغيل ملفات الوسائط باستخدام ميزة مضيف USB

يمكنك الاستمتاع بملفات الوسائط مثل الصور والأفلام والفتحات المحفوظة بمشغل MP3 أو ذاكرة USB أو الكاميرا الرقمية بصوت مرتفع عن طريق توصيل وحدة التخزين بمنفذ USB الموجود بمشغل أقراص DVD.

استخدام ميزة USB HOST مضيف (مضيف USB)

1. قم بتوصيل وحدة USB بمنفذ USB الموجود بالجهاز الأمامي من الوحدة.
2. تظهر قائمة يو إس بي (USB)، اضغط على الزر ◀▶ لتحديد قائمة، ثم اضغط على ENTER (موافق).
3. فاضط على الزرين ▲/▼ لتحديد ملف في USB. اضغط على ENTER (موافق) لفتح الملف.

ملاحظة

- و في أ ل مرة يتم الضغط على زر USB في جهاز التحكم، سوف يظهر إطار اختيار جهاز USB.
- يظهر الاختصار "USB" على شاشة العرض.
- استعدا على حجم الملف ومدته، فإن التشغيل على (USB) قد يستغرق وقتاً أبين من استخدام الوسائط الموجودة على سي دي أو دي في دي .
- تظهر الشاشة USB MENU (قائمة USB) على شاشة التلفاز، ثم يتم تشغيل الملف المحفوظ.
- إذا ألفت ذلك اسطوانة في الوحدة، فإن الضغط على زر دي في دي (DVD-D530K/DVD-D530) أو زر USB (DVD-D360K) يؤدي إلى الخروج من قائمة (USB) ويتم تحميل الاسطوانة .

إزالة USB نوحو آمن

1. اضغط على زر (DVD-D530K/DVD-D530) أو زر USB (DVD-D360K) للعودة إلى وضع القرص أو الشاشة الرئيسية
2. اضغط على الزر ■ STOP (إيقاف).
3. أزل كابل USB.

التخطي للامام/للخلف

- أثناء التشغيل، اضغط على الزر (◀◀/▶▶).
- في حالة وجود أكثر من ملف، يتم تحديد الملف التالي عند الضغط على الزر (▶▶).
 - في حالة وجود أكثر من ملف، يتم تحديد الملف السابق عند الضغط على الزر (◀◀).

التشغيل السريع

- لتشغيل القرص بسرعة أعلى، اضغط على الزر أثناء التشغيل (◀◀▶▶).
- في كل مرة يتم فيها الضغط أي من الزرين، تتغير سرعة التشغيل كما : ٢X < 4X < 8X < ١٦X < ٣٢X.

الأجهزة المتوافقة

1. وحدات USB Mass Storage v1.0 التي تدعم (وحدات USB التي تعمل كقرص قابل للإزالة في نظام التشغيل Windows (الإصدار 2000 أو الإصدار الأحدث) بدون تثبيت برنامج تشغيل (إضافي).
2. مشغل MP3 : مشغل MP3 من نوع الفلاش ومحرك الأقراص الصلبة.
3. الكاميرا الرقمية : الكاميرات التي تدعم وحدات USB Mass Storage v1.0.
- الكاميرات التي تعمل كقرص قابل للإزالة في نظام التشغيل Windows (الإصدار 2000 أو الإصدار الأحدث) بدون تثبيت برنامج تشغيل إضافي.
4. محرك أقراص فلاش USB : الأجهزة التي تدعم USB2.0 أو USB1.1.
- قد تحدث اختلافاً في جودة التشغيل عند توصيل وحدة USB1.1.
5. قارئ بطاقة USB : قارئ بطاقة USB نوع قديمة واحدة وقارئ USB.
- وفقاً لجبهة التصنيع، قد لا يتم دعم قارئ بطاقة USB.
- قد تواجهك مشكلات، في حالة تركيب وحدات ذاكرة متعددة في قارئ بطاقات متعددة.
6. في حالة استخدام كابل توصيل USB، قد لا يتم التعرف على جهاز USB.

- CBI غير مدعوم (تحكم/تضخيم/قطع)
- وايضاً الكاميرات الرقمية التي تستخدم بروتوكول PTP التي تتطلب تثبيت برنامج إضافي عند توصيلها بالكمبيوتر غير مدعومة.

- ولا يتم دعم الجهاز الذي يستخدم نظام ملف NTFS. (يتم فقط دعم نظام ملف FAT 32/16 (جدول توزيع الملف 32/16).
- وقد لا يتم تشغيل بعض مشغلات MP3 عند توصيلها بهذا المنتج وما يعتمد على حجم قطاع نظام الملفات.
- تكون وظيفة USB HOST غير مدعومة في حالة توصيل المنتج الذي يقوم بنقل ملفات الوسائط باستخدام البرنامج المخصص من المصنع.
- لا يمكن التشغيل مع أجهزة MTP (بروتوكول نقل الوسائط) التي تمكن Janus.
- وظيفة مضيف USB لهذا المنتج لا تدعم ألة أجهزة USB.
- مضيف يو إس بي ما ذا لا يدعم مشغلات القرص الصلب (HDD).

النسخ من القرص المدمج

تتيح لك هذه الميزة نسخ ملفات الصوت من القرص إلى جهاز USB بتنسيق MP3

افتح درج القرص. ضغ القرص المدمج الصوتي (CD DA) على الدرج ثم قم بإغلاقه. قم بتوصيل جهاز USB إلى مضيف USB في مقدمة المشغل. اضغط على الزر ENTER لتحديد القرص. اضغط على زر (DVD-D530K/DVD-D530) أو زر USB (DVD-D360K)

1. عندما تكون الوحة في وضع الإيقاف، اضغط على الزر **TOOLS** لعرض شاشة Ripping (انسخ من الأقراص).
2. انقر على الأزرار ▲/▼، ثم اضغط على الزر ENTER لتحديد جميع الملفات للنسخ.
3. للإلغاء تحديد نسخ جميع الملفات، اضغط على الزر ENTER مرة أخرى (قائمة إلغاء التحديد).
3. اضغط على الزر ◀ و ▶ لتحديد START (بدء) قائمة النسخ من الأقراص ، ثم اضغط على الزر ENTER.

- تحتوي قائمة النص (Ripping) على الأزرار التالية
- الوضع (سريعة/Normal)
- معدلات البت، اضغط على الزر ENTER لتغيير 128 كيلو بت/الثانية إلى 192 كيلو بت/الثانية و 128 كيلو بت/الثانية...
- تحديد الجهاز، اضغط على الزر ENTER للتغيير بين الأ أجهزة (بعد أقصى 4)
- تحديد إلغاء تحديد، اضغط على الزر ENTER للتغييرين من تحديد الكل إلى تحديد بلا.
- بدء النسخ، اضغط على الزر ENTER لبدء عملية النسخ.

ملاحظة

- لإلغاء النسخ قيد التنفيذ، اضغط زر إدخال (ENTER)
- للعودة إلى شاشة CDDA، اضغط على الزر **TOOLS** مرة أخرى.
- عندما تتم معالجة النسخ من القرص المدمج يصبح المشغل في حالة التشغيل تلقائياً.
- الأقراص المنمجة الصوتية (CD DA) التي يمكن النسخ منها.
- لأن المسرعة تعادل 2.6 ضعف من السرعة العادية لا يستطيع المستخدم تشغيل CDDA من خلال عملية نسخ الأقراص.
- لا يعمل زر يو إس بي (USB) عندما تكون في قائمة النص (Ripping).
- قد لا تعمل وظيفة اقتصاص السي دي (Ripping) مع بعض مشغلات ملفات MP3.

تشغيل القرص الذي يتضمن صور

1. حدد المجاد المطلوب
2. اضغط على الزرين ▲/▼ لتحديد ملف الصوت في قائمة المقاطع ثم اضغط على الزر ENTER.

ملاحظة

- اضغط على الزر STOP للعودة إلى قائمة المقاطع.
- عند تشغيل قرص Kodak Picture CD، تعرض الوحدة الصور مباشرة وليس قائمة المقاطع.

التوير

- اضغط على الزرين **TOOLS** لتحديد الوجه، ثم اضغط على الزر ENTER.
- في كل مرة يتم النقر فيها على زر ▶/◀، تدور الصورة 90 درجة في اتجاه عقارب الساعة.
- في كل مرة يتم الضغط على زر ▲، سوف تنعكس الصورة رأساً على عقب لعرض صوراً معكوسة.
- في كل مرة يتم الضغط على زر ▼، سوف تنعكس الصورة إلى الجانب الصحيح لعرض صوراً معكوسة.

Zoom

- اضغط على الزرين **TOOLS** لتحديد تكبير، ثم اضغط على الزر ENTER.
- في كل مرة يتم النقر فيها على زر ENTER يتم تكبير الصورة. وضع التكبير: X١<-X٢<-X٣<-X٤<-X٥<-X٦<-X٧<-X٨<-X٩<-X١٠<-X١١<-X١٢<-X١٣<-X١٤<-X١٥<-X١٦<-X١٧<-X١٨<-X١٩<-X٢٠<-X٢١<-X٢٢<-X٢٣<-X٢٤<-X٢٥<-X٢٦<-X٢٧<-X٢٨<-X٢٩<-X٣٠<-X٣١<-X٣٢<-X٣٣<-X٣٤<-X٣٥<-X٣٦<-X٣٧<-X٣٨<-X٣٩<-X٤٠<-X٤١<-X٤٢<-X٤٣<-X٤٤<-X٤٥<-X٤٦<-X٤٧<-X٤٨<-X٤٩<-X٥٠<-X٥١<-X٥٢<-X٥٣<-X٥٤<-X٥٥<-X٥٦<-X٥٧<-X٥٨<-X٥٩<-X٦٠<-X٦١<-X٦٢<-X٦٣<-X٦٤<-X٦٥<-X٦٦<-X٦٧<-X٦٨<-X٦٩<-X٧٠<-X٧١<-X٧٢<-X٧٣<-X٧٤<-X٧٥<-X٧٦<-X٧٧<-X٧٨<-X٧٩<-X٨٠<-X٨١<-X٨٢<-X٨٣<-X٨٤<-X٨٥<-X٨٦<-X٨٧<-X٨٨<-X٨٩<-X٩٠<-X٩١<-X٩٢<-X٩٣<-X٩٤<-X٩٥<-X٩٦<-X٩٧<-X٩٨<-X٩٩<-X١٠٠<-X١٠١<-X١٠٢<-X١٠٣<-X١٠٤<-X١٠٥<-X١٠٦<-X١٠٧<-X١٠٨<-X١٠٩<-X١١٠<-X١١١<-X١١٢<-X١١٣<-X١١٤<-X١١٥<-X١١٦<-X١١٧<-X١١٨<-X١١٩<-X١٢٠<-X١٢١<-X١٢٢<-X١٢٣<-X١٢٤<-X١٢٥<-X١٢٦<-X١٢٧<-X١٢٨<-X١٢٩<-X١٣٠<-X١٣١<-X١٣٢<-X١٣٣<-X١٣٤<-X١٣٥<-X١٣٦<-X١٣٧<-X١٣٨<-X١٣٩<-X١٤٠<-X١٤١<-X١٤٢<-X١٤٣<-X١٤٤<-X١٤٥<-X١٤٦<-X١٤٧<-X١٤٨<-X١٤٩<-X١٥٠<-X١٥١<-X١٥٢<-X١٥٣<-X١٥٤<-X١٥٥<-X١٥٦<-X١٥٧<-X١٥٨<-X١٥٩<-X١٦٠<-X١٦١<-X١٦٢<-X١٦٣<-X١٦٤<-X١٦٥<-X١٦٦<-X١٦٧<-X١٦٨<-X١٦٩<-X١٧٠<-X١٧١<-X١٧٢<-X١٧٣<-X١٧٤<-X١٧٥<-X١٧٦<-X١٧٧<-X١٧٨<-X١٧٩<-X١٨٠<-X١٨١<-X١٨٢<-X١٨٣<-X١٨٤<-X١٨٥<-X١٨٦<-X١٨٧<-X١٨٨<-X١٨٩<-X١٩٠<-X١٩١<-X١٩٢<-X١٩٣<-X١٩٤<-X١٩٥<-X١٩٦<-X١٩٧<-X١٩٨<-X١٩٩<-X٢٠٠<-X٢٠١<-X٢٠٢<-X٢٠٣<-X٢٠٤<-X٢٠٥<-X٢٠٦<-X٢٠٧<-X٢٠٨<-X٢٠٩<-X٢١٠<-X٢١١<-X٢١٢<-X٢١٣<-X٢١٤<-X٢١٥<-X٢١٦<-X٢١٧<-X٢١٨<-X٢١٩<-X٢٢٠<-X٢٢١<-X٢٢٢<-X٢٢٣<-X٢٢٤<-X٢٢٥<-X٢٢٦<-X٢٢٧<-X٢٢٨<-X٢٢٩<-X٢٣٠<-X٢٣١<-X٢٣٢<-X٢٣٣<-X٢٣٤<-X٢٣٥<-X٢٣٦<-X٢٣٧<-X٢٣٨<-X٢٣٩<-X٢٤٠<-X٢٤١<-X٢٤٢<-X٢٤٣<-X٢٤٤<-X٢٤٥<-X٢٤٦<-X٢٤٧<-X٢٤٨<-X٢٤٩<-X٢٥٠<-X٢٥١<-X٢٥٢<-X٢٥٣<-X٢٥٤<-X٢٥٥<-X٢٥٦<-X٢٥٧<-X٢٥٨<-X٢٥٩<-X٢٦٠<-X٢٦١<-X٢٦٢<-X٢٦٣<-X٢٦٤<-X٢٦٥<-X٢٦٦<-X٢٦٧<-X٢٦٨<-X٢٦٩<-X٢٧٠<-X٢٧١<-X٢٧٢<-X٢٧٣<-X٢٧٤<-X٢٧٥<-X٢٧٦<-X٢٧٧<-X٢٧٨<-X٢٧٩<-X٢٨٠<-X٢٨١<-X٢٨٢<-X٢٨٣<-X٢٨٤<-X٢٨٥<-X٢٨٦<-X٢٨٧<-X٢٨٨<-X٢٨٩<-X٢٩٠<-X٢٩١<-X٢٩٢<-X٢٩٣<-X٢٩٤<-X٢٩٥<-X٢٩٦<-X٢٩٧<-X٢٩٨<-X٢٩٩<-X٣٠٠<-X٣٠١<-X٣٠٢<-X٣٠٣<-X٣٠٤<-X٣٠٥<-X٣٠٦<-X٣٠٧<-X٣٠٨<-X٣٠٩<-X٣١٠<-X٣١١<-X٣١٢<-X٣١٣<-X٣١٤<-X٣١٥<-X٣١٦<-X٣١٧<-X٣١٨<-X٣١٩<-X٣٢٠<-X٣٢١<-X٣٢٢<-X٣٢٣<-X٣٢٤<-X٣٢٥<-X٣٢٦<-X٣٢٧<-X٣٢٨<-X٣٢٩<-X٣٣٠<-X٣٣١<-X٣٣٢<-X٣٣٣<-X٣٣٤<-X٣٣٥<-X٣٣٦<-X٣٣٧<-X٣٣٨<-X٣٣٩<-X٣٤٠<-X٣٤١<-X٣٤٢<-X٣٤٣<-X٣٤٤<-X٣٤٥<-X٣٤٦<-X٣٤٧<-X٣٤٨<-X٣٤٩<-X٣٥٠<-X٣٥١<-X٣٥٢<-X٣٥٣<-X٣٥٤<-X٣٥٥<-X٣٥٦<-X٣٥٧<-X٣٥٨<-X٣٥٩<-X٣٦٠<-X٣٦١<-X٣٦٢<-X٣٦٣<-X٣٦٤<-X٣٦٥<-X٣٦٦<-X٣٦٧<-X٣٦٨<-X٣٦٩<-X٣٧٠<-X٣٧١<-X٣٧٢<-X٣٧٣<-X٣٧٤<-X٣٧٥<-X٣٧٦<-X٣٧٧<-X٣٧٨<-X٣٧٩<-X٣٨٠<-X٣٨١<-X٣٨٢<-X٣٨٣<-X٣٨٤<-X٣٨٥<-X٣٨٦<-X٣٨٧<-X٣٨٨<-X٣٨٩<-X٣٩٠<-X٣٩١<-X٣٩٢<-X٣٩٣<-X٣٩٤<-X٣٩٥<-X٣٩٦<-X٣٩٧<-X٣٩٨<-X٣٩٩<-X٤٠٠<-X٤٠١<-X٤٠٢<-X٤٠٣<-X٤٠٤<-X٤٠٥<-X٤٠٦<-X٤٠٧<-X٤٠٨<-X٤٠٩<-X٤١٠<-X٤١١<-X٤١٢<-X٤١٣<-X٤١٤<-X٤١٥<-X٤١٦<-X٤١٧<-X٤١٨<-X٤١٩<-X٤٢٠<-X٤٢١<-X٤٢٢<-X٤٢٣<-X٤٢٤<-X٤٢٥<-X٤٢٦<-X٤٢٧<-X٤٢٨<-X٤٢٩<-X٤٣٠<-X٤٣١<-X٤٣٢<-X٤٣٣<-X٤٣٤<-X٤٣٥<-X٤٣٦<-X٤٣٧<-X٤٣٨<-X٤٣٩<-X٤٤٠<-X٤٤١<-X٤٤٢<-X٤٤٣<-X٤٤٤<-X٤٤٥<-X٤٤٦<-X٤٤٧<-X٤٤٨<-X٤٤٩<-X٤٥٠<-X٤٥١<-X٤٥٢<-X٤٥٣<-X٤٥٤<-X٤٥٥<-X٤٥٦<-X٤٥٧<-X٤٥٨<-X٤٥٩<-X٤٦٠<-X٤٦١<-X٤٦٢<-X٤٦٣<-X٤٦٤<-X٤٦٥<-X٤٦٦<-X٤٦٧<-X٤٦٨<-X٤٦٩<-X٤٧٠<-X٤٧١<-X٤٧٢<-X٤٧٣<-X٤٧٤<-X٤٧٥<-X٤٧٦<-X٤٧٧<-X٤٧٨<-X٤٧٩<-X٤٨٠<-X٤٨١<-X٤٨٢<-X٤٨٣<-X٤٨٤<-X٤٨٥<-X٤٨٦<-X٤٨٧<-X٤٨٨<-X٤٨٩<-X٤٩٠<-X٤٩١<-X٤٩٢<-X٤٩٣<-X٤٩٤<-X٤٩٥<-X٤٩٦<-X٤٩٧<-X٤٩٨<-X٤٩٩<-X٥٠٠<-X٥٠١<-X٥٠٢<-X٥٠٣<-X٥٠٤<-X٥٠٥<-X٥٠٦<-X٥٠٧<-X٥٠٨<-X٥٠٩<-X٥١٠<-X٥١١<-X٥١٢<-X٥١٣<-X٥١٤<-X٥١٥<-X٥١٦<-X٥١٧<-X٥١٨<-X٥١٩<-X٥٢٠<-X٥٢١<-X٥٢٢<-X٥٢٣<-X٥٢٤<-X٥٢٥<-X٥٢٦<-X٥٢٧<-X٥٢٨<-X٥٢٩<-X٥٣٠<-X٥٣١<-X٥٣٢<-X٥٣٣<-X٥٣٤<-X٥٣٥<-X٥٣٦<-X٥٣٧<-X٥٣٨<-X٥٣٩<-X٥٤٠<-X٥٤١<-X٥٤٢<-X٥٤٣<-X٥٤٤<-X٥٤٥<-X٥٤٦<-X٥٤٧<-X٥٤٨<-X٥٤٩<-X٥٥٠<-X٥٥١<-X٥٥٢<-X٥٥٣<-X٥٥٤<-X٥٥٥<-X٥٥٦<-X٥٥٧<-X٥٥٨<-X٥٥٩<-X٥٦٠<-X٥٦١<-X٥٦٢<-X٥٦٣<-X٥٦٤<-X٥٦٥<-X٥٦٦<-X٥٦٧<-X٥٦٨<-X٥٦٩<-X٥٧٠<-X٥٧١<-X٥٧٢<-X٥٧٣<-X٥٧٤<-X٥٧٥<-X٥٧٦<-X٥٧٧<-X٥٧٨<-X٥٧٩<-X٥٨٠<-X٥٨١<-X٥٨٢<-X٥٨٣<-X٥٨٤<-X٥٨٥<-X٥٨٦<-X٥٨٧<-X٥٨٨<-X٥٨٩<-X٥٩٠<-X٥٩١<-X٥٩٢<-X٥٩٣<-X٥٩٤<-X٥٩٥<-X٥٩٦<-X٥٩٧<-X٥٩٨<-X٥٩٩<-X٦٠٠<-X٦٠١<-X٦٠٢<-X٦٠٣<-X٦٠٤<-X٦٠٥<-X٦٠٦<-X٦٠٧<-X٦٠٨<-X٦٠٩<-X٦١٠<-X٦١١<-X٦١٢<-X٦١٣<-X٦١٤<-X٦١٥<-X٦١٦<-X٦١٧<-X٦١٨<-X٦١٩<-X٦٢٠<-X٦٢١<-X٦٢٢<-X٦٢٣<-X٦٢٤<-X٦٢٥<-X٦٢٦<-X٦٢٧<-X٦٢٨<-X٦٢٩<-X٦٣٠<-X٦٣١<-X٦٣٢<-X٦٣٣<-X٦٣٤<-X٦٣٥<-X٦٣٦<-X٦٣٧<-X٦٣٨<-X٦٣٩<-X٦٤٠<-X٦٤١<-X٦٤٢<-X٦٤٣<-X٦٤٤<-X٦٤٥<-X٦٤٦<-X٦٤٧<-X٦٤٨<-X٦٤٩<-X٦٥٠<-X٦٥١<-X٦٥٢<-X٦٥٣<-X٦٥٤<-X٦٥٥<-X٦٥٦<-X٦٥٧<-X٦٥٨<-X٦٥٩<-X٦٦٠<-X٦٦١<-X٦٦٢<-X٦٦٣<-X٦٦٤<-X٦٦٥<-X٦٦٦<-X٦٦٧<-X٦٦٨<-X٦٦٩<-X٦٧٠<-X٦٧١<-X٦٧٢<-X٦٧٣<-X٦٧٤<-X٦٧٥<-X٦٧٦<-X٦٧٧<-X٦٧٨<-X٦٧٩<-X٦٨٠<-X٦٨١<-X٦٨٢<-X٦٨٣<-X٦٨٤<-X٦٨٥<-X٦٨٦<-X٦٨٧<-X٦٨٨<-X٦٨٩<-X٦٩٠<-X٦٩١<-X٦٩٢<-X٦٩٣<-X٦٩٤<-X٦٩٥<-X٦٩٦<-X٦٩٧<-X٦٩٨<-X٦٩٩<-X٧٠٠<-X٧٠١<-X٧٠٢<-X٧٠٣<-X٧٠٤<-X٧٠٥<-X٧٠٦<-X٧٠٧<-X٧٠٨<-X٧٠٩<-X٧١٠<-X٧١١<-X٧١٢<-X٧١٣<-X٧١٤<-X٧١٥<-X٧١٦<-X٧١٧<-X٧١٨<-X٧١٩<-X٧٢٠<-X٧٢١<-X٧٢٢<-X٧٢٣<-X٧٢٤<-X٧٢٥<-X٧٢٦<-X٧٢٧<-X٧٢٨<-X٧٢٩<-X٧٣٠<-X٧٣١<-X٧٣٢<-X٧٣٣<-X٧٣٤<-X٧٣٥<-X٧٣٦<-X٧٣٧<-X٧٣٨<-X٧٣٩<-X٧٤٠<-X٧٤١<-X٧٤٢<-X٧٤٣<-X٧٤٤<-X٧٤٥<-X٧٤٦<-X٧٤٧<-X٧٤٨<-X٧٤٩<-X٧٥٠<-X٧٥١<-X٧٥٢<-X٧٥٣<-X٧٥٤<-X٧٥٥<-X٧٥٦<-X٧٥٧<-X٧٥٨<-X٧٥٩<-X٧٦٠<-X٧٦١<-X٧٦٢<-X٧٦٣<-X٧٦٤<-X٧٦٥<-X٧٦٦<-X٧٦٧<-X٧٦٨<-X٧٦٩<-X٧٧٠<-X٧٧١<-X٧٧٢<-X٧٧٣<-X٧٧٤<-X٧٧٥<-X٧٧٦<-X٧٧٧<-X٧٧٨<-X٧٧٩<-X٧٨٠<-X٧٨١<-X٧٨٢<-X٧٨٣<-X٧٨٤<-X٧٨٥<-X٧٨٦<-X٧٨٧<-X٧٨٨<-X٧٨٩<-X٧٩٠<-X٧٩١<-X٧٩٢<-X٧٩٣<-X٧٩٤<-X٧٩٥<-X٧٩٦<-X٧٩٧<-X٧٩٨<-X٧٩٩<-X٨٠٠<-X٨٠١<-X٨٠٢<-X٨٠٣<-X٨٠٤<-X٨٠٥<-X٨٠٦<-X٨٠٧<-X٨٠٨<-X٨٠٩<-X٨١٠<-X٨١١<-X٨١٢<-X٨١٣<-X٨١٤<-X٨١٥<-X٨١٦<-X٨١٧<-X٨١٨<-X٨١٩<-X٨٢٠<-X٨٢١<-X٨٢٢<-X٨٢٣<-X٨٢٤<-X٨٢٥<-X٨٢٦<-X٨٢٧<-X٨٢٨<-X٨٢٩<-X٨٣٠<-X٨٣١<-X٨٣٢<-X٨٣٣<-X٨٣٤<-X٨٣٥<-X٨٣٦<-X٨٣٧<-X٨٣٨<-X٨٣٩<-X٨٤٠<-X٨٤١<-X٨٤٢<-X٨٤٣<-X٨٤٤<-X٨٤٥<-X٨٤٦<-X٨٤٧<-X٨٤٨<-X٨٤٩<-X٨٥٠<-X٨٥١<-X٨٥٢<-X٨٥٣<-X٨٥٤<-X٨٥٥<-X٨٥٦<-X٨٥٧<-X٨٥٨<-X٨٥٩<-X٨٦٠<-X٨٦١<-X٨٦٢<-X٨٦٣<-X٨٦٤<-X٨٦٥<-X٨٦٦<-X٨٦٧<-X٨٦٨<-X٨٦٩<-X٨٧٠<-X٨٧١<-X٨٧٢<-X٨٧٣<-X٨٧٤<-X٨٧٥<-X٨٧٦<-X٨٧٧<-X٨٧٨<-X٨٧٩<-X٨٨٠<-X٨٨١<-X٨٨٢<-X٨٨٣<-X٨٨٤<-X٨٨٥<-X٨٨٦<-X٨٨٧<-X٨٨٨<-X٨٨٩<-X٨٩٠<-X٨٩١<-X٨٩٢<-X٨٩٣<-X٨٩٤<-X٨٩٥<-X٨٩٦<-X٨٩٧<-X٨٩٨<-X٨٩٩<-X٩٠٠<-X٩٠١<-X٩٠٢<-X٩٠٣<-X٩٠٤<-X٩٠٥<-X٩٠٦<-X٩٠٧<-X٩٠٨<-X٩٠٩<-X٩١٠<-X٩١١<-X٩١٢<-X٩١٣<-X٩١٤<-X٩١٥<-X٩١٦<-X٩١٧<-X٩١٨<-X٩١٩<-X٩٢٠<-X٩٢١<-X٩٢٢<-X٩٢٣<-X٩٢٤<-X٩٢٥<-X٩٢٦<-X٩٢٧<-X٩٢٨<-X٩٢٩<-X٩٣٠<-X٩٣١<-X٩٣٢<-X٩٣٣<-X٩٣٤<-X٩٣٥<-X٩٣٦<-X٩٣٧<-X٩٣٨<-X٩٣٩<-X٩٤٠<-X٩٤١<-X٩٤٢<-X٩٤٣<-X٩٤٤<-X٩٤٥<-X٩٤٦<-X٩٤٧<-X٩٤٨<-X٩٤٩<-X٩٥٠<-X٩٥١<-X٩٥٢<-X٩٥٣<-X٩٥٤<-X٩٥٥<-X٩٥٦<-X٩٥٧<-X٩٥٨<-X٩٥٩<-X٩٦٠<-X٩٦١<-X٩٦٢<-X٩٦٣<-X٩٦٤<-X٩٦٥<-X٩٦٦<-X٩٦٧<-X٩٦٨<-X٩٦٩<-X٩٧٠<-X٩٧١<-X٩٧٢<-X٩٧٣<-X٩٧٤<-X٩٧٥<-X٩٧٦<-X٩٧٧<-X٩٧٨<-X٩٧٩<-X٩٨٠<-X٩٨١<-X٩٨٢<-X٩٨٣<-X٩٨٤<-X٩٨٥<-X٩٨٦<-X٩٨٧<-X٩٨٨<-X٩٨٩<-X٩٩٠<-X٩٩١<-X٩٩٢<-X٩٩٣<-X٩٩٤<-X٩٩٥<-X٩٩٦<-X٩٩٧<-X٩٩٨<-X٩٩٩<-X١٠٠٠<-X١٠٠١<-X١٠٠٢<-X١٠٠٣<-X١٠٠٤<-X١٠٠٥<-X١٠٠٦<-X١٠٠٧<-X١٠٠٨<-X١٠٠٩<-X١٠١٠<-X١٠١١<-X١٠١٢<-X١٠١٣<-X١٠١٤<-X١٠١٥<-X١٠١٦<-X١٠١٧<-X١٠١٨<-X١٠١٩<-X١٠٢٠<-X١٠٢١<-X١٠٢٢<-X١٠٢٣<-X١٠٢٤<-X١٠٢٥<-X١٠٢٦<-X١٠٢٧<-X١٠٢٨<-X١٠٢٩<-X١٠٣٠<-X١٠٣١<-X١٠٣٢<-X١٠٣٣<-X١٠٣٤<-X١٠٣٥<-X١٠

ملاحظة

- حسب حجم الملف، قد يكون مقدار الفاصل بين كل صورة مختلفاً عن هذا الدليل.
- إذا لم يتم الضغط على أي زر، فسيبدأ عرض الشرائح تلقائياً خلال ١٠ ثوانٍ بشكل أوتوماتي.

تشغيل القرص الذي يتضمن صور JPEG-HD (DVD-D530K/DVD-D530)

يجب التوصل إلى HDMI ، يجب أن تبلغ الدقة 1080p/1080i/720p تكون HD-JPEG في الوضع HD.

- حدد المجلد المطلوب
- اضغط على الزرين **▲/▼** لتحديد ملف صورة في قائمة المقاطع ثم اضغط على الزر **ENTER**.
- اضغط على الزر **STOP (■)** للعودة إلى قائمة المقاطع.
- عند تشغيل قرص Kodak Picture CD ، يعرض جهاز الصور مباشرةً وليس قائمة المقاطع.

التدوير

- اضغط على الزرين **TOOLS** لتحديد الوجه ، ثم اضغط على الزر **ENTER** اضغط على الزر **►/◀** لتدوير الشاشة بمقدار ٩٠ درجة جهة اليسار / اليمين.

تخطي الصورة

- اضغط على الزر **▶▶** أو **◀◀** لتحديد الصورة السابقة أو التالية.

Zoom

- اضغط على الزرين **TOOLS** لتحديد تكبير ، ثم اضغط على الزر **ENTER**.
- في كل مرة يتم النقر فيها على زر **ENTER** يتم تكبير الصورة. وضع التكبير: X١-X٢-X٣-X٤-X٥.

عرض الشرائح

- اضغط على الزر **PLAY (▶)** لبدء الوظيفة SLIDE.
- اضغط على الزر **PAUSE (||)** لإيقاف الوظيفة SLIDE. اضغط على زر **PLAY** (تشغيل) لمواصلة عرض الشرائح.

ملاحظة

- حسب حجم الملف، قد يكون مقدار الزمن الفاصل بين كل صورة مختلفاً عن الزمن الفاصل المضبوط
- قد تظهر الصورة بحجم أصغر حسب حجم الصورة عند عرض الصور في الوضع HD-JPEG
- يوصى بضبط وظيفة BD Wise على الوضع Off (إيقاف التشغيل) في حالة عرض ملف صور JPEG بحجم أكبر من 480 x ٦٥٠ بكسل

تشغيل MP3-JPEG

يمكنك تشغيل ملفات JPEG مع استخدام الموسيقى.

- اضغط على الزرين **▲/▼** لتحديد ملف **MP3** في قائمة المقاطع ثم اضغط على الزر **ENTER**. للعودة لقائمة القائمة، اضغط ز رجوع **RETURN** أو القائمة **MENU**
- اضغط على الزرين **►/◀** لتحديد ملف قائمة صور، ثم اضغط على الزر **ENTER**
- اضغط على الزرين **▲/▼** لتحديد ملف **JPEG** في قائمة المقاطع ثم اضغط على الزر **ENTER**.
- سيتم تشغيل الموسيقى من البداية
- اضغط على الزر **Stop** عندما تريد إيقاف التشغيل.

ملاحظة

- يجب أن تكون ملفات MP3 و JPEG موجودة على نفس القرص.

قرص CD-R نو ملفات باامتداد JPEG

- يمكن تشغيل الملفات ذات الامتداد "jpg" و "JPG". فقط
- إذا كان القرص غير مغلق، فسيستغرق وقتاً أطول لبدء التشغيل وقد يتغير تشغيل كافة الملفات المسجلة.
- يمكن تشغيل أقراص CD-R التي تشتمل على ملفات JPEG بتنسيق ISO 9660 أو Joliet فقط.
- لا يجوز أن يكون اسم ملف JPEG أطول من ٨ حروف ويجب ألايشتمل على مسافات فارغة أو حروف خاصة (/ . +)
- يمكن تشغيل قرص تمت كتابته على جلسات متتالية فقط. إذا أنشئ قرص الجلسات المعددة فإلى مقطع فارغ، فيمكن تشغيل العرض حتى المقطع الفارغ فقط.
- يمكن تسجيل ٥٠٠ صورة كحد أقصى على قرص مضغوط واحد.
- يُسمح باستخدام أقراص Kodak Picture CD.

- عند تشغيل أقراص Kodak Picture CD ، يمكن تشغيل ملفات JPEG فقط في مجلد الصور.
- قرص Kodak Picture CD : يمكن تشغيل ملفات JPEG الموجودة في مجلد الصور بشكل تلقائي.
- قرص Konica Picture CD : إذا كنت تريد عرض الصورة، فحدد ملفات JPEG في قائمة المقاطع
- قرص Fuji Picture CD : إذا كنت تريد عرض الصورة، فحدد ملفات JPEG في قائمة المقاطع
- قرص QSS Picture CD : قد لا تستطيع الوحدة تشغيل قرص QSS Picture CD
- إذا كان عدد الملفات الموجودة في قرص واحد فقط يزيد عن ٥٠٠ ملف، فيمكن تشغيل ٥٠٠ ملف بتنسيق JPEG فقط.
- إذا كان عدد المجلدات الموجودة في قرص واحد فقط يزيد عن ٥٠٠ مجلد، فيمكن تشغيل ملفات JPEG فقط ٥٠٠ مجلد.

وظائف كاريوكي (DVD-D530K/DVD-D360K)

وظائف كاريوكي

يسلسل عمليات التشغيل

١. قم بتوصيل طرفي خرج الصوت المشترك بتلفزيون أو مكبر.
٢. قم بتوصيل قاسم الميكروفون **Mic** (الميكروفون) بـ توصيل نتيجة الكاريوكي على تشغيل. عند توصيل الميكروفون وحيط نتيجة الكاريوكي على تشغيل، يمكنك استخدام وظائف الكاريوكي.

نتيجة الكاريوكي/ مستوى صوت الميكروفون/ التحكم في المفتاح (التحكم في النغمة)

١. قم بتشغيل قرص الكاريوكي الذي يضم الأغاني التي تريد.
- اضغط على الزرين **KARAOKE (▼)** لتحديد ملف النتيجة مستوى الصوت أو مفتاح.
٢. اضغط على الزرين **◀/▶** لتحديد العنصر المطلوب.

نتيجة الكاريوكي (النتيجة)

مستظهر لنتيجة ك :

١. الميكروفون، ن متصل ونتيجة الكاريوكي قيد التشغيل.
٢. في نهاية كل فصل/ عنوان لقرص الكاريوكي.
- إذا كان كاريوكي **DVD** يحتوي على أي معلومات حول محرك النتيجة.
- في حالة **VCD**، لا يستطيع الجهاز التمييز بين الكاريوكي الصلب أو الأفلام. وعندئذٍ مستظهر النتيجة دوماً.
٣. مستظهر نتيجة الكاريوكي عند انتهاء وقت كل فصل/ عنوان لمدة 6 ثوانٍ تقريبا

برنامج تسجيل الصوت بطريقة كاريوكي (KARAOKE)

١. أدخل وسائط تخزين USB في مقبس USB ثم وصل قاييس بالميكروفون بالميكروفون.
٢. لبدء تشغيل برنامج التسجيل كاريوكي ، اختر أحد ملفات VCD/DVD/SCVD ، ثم اضغط زر **RECORD** (تسجيل).
٣. عند التشغيل ، لا يستطيع المستخدم سوي الضغط على زر **STOP** (إيقاف) وزر **PAUSE** (إيقاف مؤقت) لإلغاء التسجيل.
٤. عند قيام المستخدم بعملية الإلغاء ، فإنه سيتم حفظ نتيجة الملف.

ملاحظة

- إذا كنت تسمع صوتاً معيماً (صراخ أو نباح) عند استخدام ميزة كاريوكي، فانقل الميكروفون بعيداً عن المكبرات أو قم بخفض مستوى صوت الميكروفون أو مستوى صوت لمكبر.
- عند تشغيل قرص يشتمل على ملفات MP3 و WMA و LPCM، فلن تعمل ميزة كاريوكي.
- عند توصيل **MIC**، لا يعمل طرف التوصيل **DIGITAL OUT**.
- مصدر صوت **MIC** صوت من خلال خرج النماظر فقط.
- في حالة توصيل ميكروفون بمقبس المايكروفون (MIC) الموجود باللوحة الأمامية، يتم تغيير نظام الصوت 5.1CH إلى نظام الصوت 2CH تلقائياً، ولا يمكن تغيير هذه الحالة ما لم يتم فصل المايكروفون.

تعطيل Setup Menu

استخدام Setup Menu

تتيح لك القائمة Setup تخصيص مشغل DVD عن طريق السماح بتحديد تعديلات اللغة المختلفة وإعداد مستوى رئيسي، بل وضبط المشغل على نوع شاشة التلفزيون المتوفرة لديك.

1. أثناء ضبط الوحدة على الوضع Stop، اضغط على الزر MENU بحكم عن بُعد. استخدم الزرين ◀/▶ لتحديد الإعدادات، ثم اضغط على الزر ENTER.
2. استخدم الزرين ▲/▼ لتحديد Setup، ثم اضغط على ▶ أو الزر ENTER.
3. اضغط على الزرين ▲/▼ للول إلى الميزات المختلفة. اضغط على ▶ أو الزر ENTER للوصول إلى الميزات الفرعية.
4. لإلغاء عرض شاشة الإعداد بعد إجراء الإعداد، اضغط على الزر RETURN مرة.

ضبط خيارات العرض

تتيح لك خيارات الصوت إعداد جهاز الصوت وإعدادات حالة الصوت حسب نظام الصوت المستخدم.

1. أثناء ضبط الوحدة على الوضع Stop، اضغط على الزر MENU بحكم عن بُعد. استخدم الزرين ◀/▶ لتحديد الإعدادات، ثم اضغط على الزر ENTER.
2. اضغط على الزرين ▲/▼ لتحديد عرض، ثم اضغط على ▶ أو الزر ENTER.
3. اضغط على الزرين ▲/▼ لتحديد المصير المطلوب، ثم اضغط على ▶ أو الزر ENTER.

وظيفة BD-Wise (DVD-D530K/DVD-D530)

عندما يكون المشغل متصلاً بأحد أجهزة تلفزيون SAMSUNG التي تدعم وظيفة BD Wise، يمكن التمتع بجودة صورة محسنة وذلك من خلال ضبط وظيفة BD Wise على الوضع On (تشغيل).

1. أثناء ضبط الوحدة على الوضع Stop، اضغط على الزر MENU بحكم عن بُعد. استخدم الزرين ◀/▶ لتحديد الإعدادات، ثم اضغط على الزر ENTER.
 2. اضغط على الزرين ▲/▼ لتحديد عرض، ثم اضغط على ▶ أو الزر ENTER.
 3. اضغط على الزرين ▲/▼ لتحديد BD-Wise، ثم اضغط على ▶ أو الزر ENTER.
- اضبط على الزرين ▲/▼ لتحديد تشغيل/إيقاف، ثم اضغط على الزر ENTER.

ملاحظة

- يمكن تغيير هذا الخيار إلا إذا كان التلفزيون يدعم وظيفة BD Wise
- ارجع إلى دليل مستخدم التلفزيون للتعرف على ما إذا كان التلفزيون يدعم المصحح المتقدم أم لا. وإذا كان التلفزيون يدعم المصحح المتقدم، فقم بتفعيل الوارد في دليل مستخدم التلفزيون بما يتفق مع إعدادات الاستعراض المتقدم في قائمة نظام التلفزيون.
- في حالة ضبط Video Output بطريقة غير صحيحة، قد لا تظهر الشاشة.
- تعتمد درجات الدقة المتوفرة لخرج HDMI على التلفزيون أو آلة العرض المستخدمة. للاطلاع على التفاصيل، يرجى الرجوع إلى دليل المستخدم الخاص بجهاز التلفزيون أو آلة العرض لديك.
- عند تغيير مستوى الدقة أثناء التشغيل، قد يتطلب الأمر ثوانٍ قليلة لظهور العالمة.
- في حالة ضبط خرج HDMI على 720p أو 1080p أو 1080i بوفر خرج HDMI جودة أفضل للصور.
- يوصى بضبط وظيفة BD Wise على الوضع Off (إيقاف التشغيل) في حالة عرض ملف صور JPEG بحجم أكبر من 480 x 720 بكسل.

ضبط خيارات الصوت

تتيح لك خيارات الصوت إعداد جهاز الصوت وإعدادات حالة الصوت حسب نظام الصوت المستخدم.

1. أثناء ضبط الوحدة على الوضع Stop، اضغط على الزر MENU بحكم عن بُعد. استخدم الزرين ◀/▶ لتحديد الإعدادات، ثم اضغط على الزر ENTER.

2. اضغط على الزرين ▲/▼ لتحديد الصوت، ثم اضغط على ▶ أو الزر ENTER.

3. اضغط على الزرين ▲/▼ لتحديد المصير المطلوب، ثم اضغط على ▶ أو الزر ENTER.

ملاحظة

- عند تشغيل قرص يشتمل على صوت MPEG في تحديد bitsream، قد لا يتمتل أجهوز على خرج صوت هوو يستند إلى مستقبل الصوت.
- لا يوجد خرج صوت تناظري عند تشغيل قرص صوت.
- حتى أثناء ضبط PCM Down Sampling على off.
- ستقوم بعض الأقراص بإخراج الصوت ذي المعايير المنخفضة فقط من خلال عمليات الخرج الرقمية.

HDMI (DVD-D530K/DVD-D530)

- إذا لم يكن التلفزيون المتوفر لديك متوافقاً مع تنسيقات الضغط متعددة القنوات (دولبي رقمي أو MPEG)، فيجب ضبط Digital Audio على PCM.
- إذا لم يكن التلفزيون المتوفر لديك متوافقاً مع معدلات العينة LPCM التي تتجاوز 48 كيلوهرتز، فيجب ضبط PCM Down sampling على On.

تم التصنيع بموجب ترخيص من Dolby Laboratories. "Dolby" ورمز حرف D المزدوج يمثلان علامتين

لـ Dolby Laboratories.

ضبط خيارات النظام

1. أثناء ضبط الوحدة على الوضع Stop، اضغط على الزر MENU بحكم عن بُعد. استخدم الزرين ◀/▶ لتحديد الإعدادات، ثم اضغط على الزر ENTER.
2. اضغط على الزرين ▲/▼ لتحديد نظام، ثم اضغط على ▶ أو الزر ENTER.
3. اضغط على الزرين ▲/▼ لتحديد المصير المطلوب، ثم اضغط على ▶ أو الزر ENTER.

وظيفة Anynet+ (HDMI-CEC) (DVD-D530K/DVD-D530)

يمكن استخدام وظيفة Anynet+ لتشغيل الوحدة باستخدام وحدة التحكم عن بعد الجالسة لتلفاز سامسونج، وذلك بتوصيل DVD-D530K/D530 إلى تلفاز ساسونج باستخدام كابل HDMI. (ويوفر هذا فقط مع أجهزة تلفاز سامسونج التي تدعم وظيفة Anynet+).

حدد "تشغيل" عند توصيل DVD-D530K/D530 باستخدام تلفاز سامسونج يدعم وظيفة Anynet+.

1. أثناء ضبط الوحدة على الوضع Stop، اضغط على الزر MENU بحكم عن بُعد. استخدم الزرين ◀/▶ لتحديد الإعدادات، ثم اضغط على الزر ENTER.
2. اضغط على الزرين ▲/▼ لتحديد نظام، ثم اضغط على ▶ أو الزر ENTER.
3. اضغط على الزرين ▲/▼ لتحديد ANYNET+(HDMI-CEC)، ثم اضغط على ▶ أو الزر ENTER.
4. حدد، ANYNET+(HDMI-CEC) على "تشغيل". (يشغل DVD، ثم اضغط على الزر ENTER).
5. اضبط وظيفة Anynet+ في التلفاز. (راجع دليل تعليمات التلفاز لمعرفة المعلومات).

ملاحظة

- بالضغط على زر Play (تشغيل) بالوحدة أثناء مشاهدة التلفاز، سيتم تغيير شاشة التلفاز إلى شاشة التشغيل.
- في حالة تشغيل DVD أثناء إيقاف طاقة التلفاز، يتم تشغيل طاقة التلفاز.
- عند إيقاف تشغيل التلفاز، يتم إيقاف تشغيل DVD تلقائياً.
- في حالة تغيير HDMI إلى مصادر أخرى (المركب أو المكون أو ما إلى ذلك) في التلفاز أثناء تشغيل قرص DVD، يتوقف مشغل DVD، لكن يسمر تشغيل قرص DVD في مشغل DVD حسب التتبع الذي يدعمه قرص DVD.

ضبط ميزات اللغة

إذا تم ضبط قائمة المشغلو قائمة الأفرصولغة الصوت و لغة التزجمة المصاحبة بشكل مسبق، فستظهر جميعاً بشكل تلقائي في كل مرة يتم فيها عرض فيلم.

1. أثناء ضبط الوحدة على الوضع Stop، اضغط على الزر MENU بحكم عن بُعد. اسخدم الزرين ◀/▶ لتحديد الإعدادات، ثم اضغط على الزر ENTER.
2. اضبط على الزرين ▲/▼ لتحديد اللغة، ثم اضغط على ▶ أو الزر ENTER.
3. اضبط على الزرين ▲/▼ لتحديد اللغة المطلوبة، ثم اضغط على ▶ أو الزر ENTER.

ملاحظة

- يتم تبيد اللغة و تعود الشاشة إلى قائمة Language Setup.
- لإخفاء عرض قائمة الإعداد، اضغط على الزر Menu.
- إذا كانت اللغة المحددة غير مسجلة على القرص فسيتم تحديد اللغة الأصلية مسبقاً للتسجيل.
- حدد "Original" إذا كنت تريد ضبط لغة الإقراضية لمادة المسجلة بحيث تكون اللغة الأصلية لتسجيل القرص.
- حدد "Automatic" إذا كنت تريد ضبط لغة المصاحبة على نفس
- قد لا تشمل بعض الأقراص اللغة التي تم تحديد ها كلغة أولى، وفي تلك الحالة يستخدم القرص إعداد اللغة الأصلية

ضبط خيارات الحماية

تمل وظيفة Parental Control بالاشتراك مع أقراص DVD التي تبين تصنيف لها بحيث تما على التحكم في أقرص DVD التي تما هذا الأسرّة. يوجد ما يصل إلى 8 مستويات تصنيف على القرص.

إعداد مستوى التصنيف و تغيير كلمة المرور

1. أثناء ضبط الوحدة على الوضع Stop، اضغط على الزر MENU بحكم عن بُعد. اسخدم الزرين ◀/▶ لتحديد الإعدادات، ثم اضغط على الزر ENTER.
2. اضبط على الزرين ▲/▼ لتحديد الأمان، ثم اضغط على ▶ أو الزر ENTER. أدخل كلمة المرور.
3. اضبط على الزرين ▲/▼ لتحديد الوالدين/تغيير كلمة المرور، ثم اضغط على ▶ أو الزر ENTER.
4. اضغط على الزرين ▲/▼ لتحديد Rating Level المطلوب، ثم اضغط على الزر ENTER.
(مثال) الإعداد في الوضع أمن الطفل
- فمثلاً: إذا تم تحديد حتى أمن الطفل، فلن يتم تشغيل الأقراص التي تشتمل على المستوى 2 أو أعلى لا يمكن تشغيلها.
5. أدخل كلمة المرور. إذا ألبت هذه هي المرة الأولى، أدخل 0000. ثم أدخل الة المرور الجديدة. يجب أن تكون الة المرور عدداً غير 0000 لتفعيل وظيفة التحكم الأبوي. أعد إدخال كلمة المرور الجديدة مجدداً.

مستويات الحماية :

- أمن الطفل
- G (الجمهور العام): جميع الأعمار المسموح لها
- PG (التوجيه الأبوي المقترح): الممكن وجود بعض المواد غير الملائمة للأطفال.
- 13-PG (تحذير الأباء بشدة): من المحتمل وجود بعض المواد غير الملائمة للأطفال تحت سن 13.
- PGR (التوجيه الأبوي المقترح): ليس من الضروري عدم ملامتها للأطفال وكم من الواجب تحفظ المشاهدة من الأباء أو الأوصياء للمشاهدين الصغار.
- R (محظور) : من المقترض وجود صريحة للمشاهدين تحت سن 17
- NC 17 (NC 17) : لا يتم السماح لأحد من سن 17 فأقل
- بالغ

ملاحظة

- إذا نسبت كلمة المرور الخاصة بك، فانظر "تعيين كلمة المرور" في دليل استكشاف الأخطاء وإصلاحها

ضبط خيارات العامة

1. أثناء ضبط الوحدة على الوضع Stop، اضغط على الزر MENU بحكم عن بُعد. اسخدم الزرين ◀/▶ لتحديد الإعدادات، ثم اضغط على الزر ENTER.
2. اضبط على الزرين ▲/▼ لتحديد عام، ثم اضغط على ▶ أو الزر ENTER.
3. اضبط على الزرين ▲/▼ لتحديد المصدر المطلوب، ثم اضغط على ▶ أو الزر ENTER.

ضبط خيارات الدعم

يتيح لك خيار الدعم (Support) التعرف على معلومات مشغل الدي في دي (DVD) مثل رمز الوضع، نسخة البرنامج، الرقم المسلسل ورقم الإصدار حيث يمكن الاطلاع على هذه المعلومات على ظهر مشغل الدي في دي (DVD).

1. أثناء ضبط الوحدة على الوضع Stop، اضغط على الزر MENU بحكم عن بُعد. اسخدم الزرين ◀/▶ لتحديد الإعدادات، ثم اضغط على الزر ENTER.
2. اضبط على الزرين ▲/▼ لتحديد الدعم، ثم اضغط على ▶ أو الزر ENTER.
3. حدد معلومات المنتج، ثم اضغط على ▶ أو الزر ENTER.

استكشاف الأخطاء وإصلاحها

قبل طاب الصيانة (استكشاف الأخطاء وإصلاحها) ، يرجى الرجوع إلى ما يلي.

المشكلة	الإجراء
الشاشة لا تظهر	<ul style="list-style-type: none"> • اضغط على الزر II ► (على اللوحة الأمامية) لمدة أكثر من ٥ ثوان أثناء عدم وجود أي قرص بالداخل. ستعود كافة الإعدادات إلى إعدادات المصنع مرة أخرى.
لا يمكن تذكر كلمة المرور	<ul style="list-style-type: none"> • اضغط على الزر II ► (على اللوحة الأمامية) لمدة أكثر من ٥ ثوان أثناء عدم وجود أي قرص. بالداخل. ستعود كافة الإعدادات إلى قيم إعدادات المصنع بما في ذلك كلمة المرور. لانتجا إلى استخدام ذلك إلا في حالة الضرورة القصوى.
لا يوجد خرج HDMI	<ul style="list-style-type: none"> • تأكد من أن خرج الفيديو يعمل بدعم HDMI. • افحص الوصلة بين التلفزيون ومقبس HDMI بمشغل DVD. • تأكد أن جهاز التلفزيون يدعم مشغل DVD الذي يعمل بدعم 480p/720p/1080i/1080p.
اهتزاز خرج HDMI تبدو	<ul style="list-style-type: none"> • في حالة ظهور تشويش أبيض للون على الشاشة ، فهذا يعني أن التلفزيون لا يدعم HDCP (حماية المحتوى عالي النطاق).
اهتزاز خرج HDMI	<ul style="list-style-type: none"> • تأكد أن إعداد نظام التلفزيون يعمل بطريقة صحيحة. • قمتبتر الشاشة عندتحويل معدل الإطار من ٥٠ هرتز إلى ٦٠ هرتز بالنسبة لخرج HDMI (واجهة الوسائط المتعددة عالية الوضوح) التي تعمل بمستوى دقة 720p/1080i/1080p. • يرجى مراجعة دليل المستخدم الخاص بالتلفزيون.

المواصفات

عامة	متطلبات التيار الكهربائي	٢٤٠.١١٠ فولت من التيار المتردد ، بتردد ٦٠/٥٠ هرتز
	استهلاك التيار الكهربائي	لعرفة مواصفات مزود الطاقة ومعدلات استهلاكها، ا لرجاء الرجوع إلى اللصق الوجود على النتج
	الوزن	١,٢ كجم
	الأبعاد	٣٦٠ ملم (عرض) X ٢٠٧ ملم (عمق) X ٤٢ ملم (ارتفاع)
	نطاق درجة حرارة التشغيل	5°C إلى +35°C
خرج الفيديو	نطاق رطوبة التشغيل	١٠٪ إلى ٧٥٪
	فيديو مركب	قناة ١ : 1.0 Vp-p (حمل ٧٥ أوم)
	مكون الفيديو	Y : 1.0 Vp-p (حمل ٧٥ أوم) Pr : 0.70 Vp-p (حمل ٧٥ أوم) Pb : 0.70 Vp-p (حمل ٧٥ أوم)
	HDMI (DVD-D530K/DVD-D530)	480p/576p. 720p. 1080i. 1080p
	طرف الإخراج	RCA
خرج الصوت	أقصى مستوى للإخراج	٢ Vrms
	خرج صوت رقمي	٢٠ هرتز إلى ٢٠ كيلو هرتز
	استجابة التردد	طرف ثنائي المحور (S/PDIF)

بشركة SAMSUNG في كافة أنحاء العالم

إذا كان لديك أي استفسار أو تعليق على منتجات Samsung، فيجري الاتصال بمركز خدمة العملاء الخاص بشركة SAMSUNG.

Web Site	Contact Center ☎	Area	Region
www.samsung.com/ca	1-800-SAMSUNG (726-7864)	Canada	North America
www.samsung.com/mx	01-800-SAMSUNG (726-7864)	Mexico	
www.samsung.com/us	1-800-SAMSUNG (726-7864)	U.S.A	
www.samsung.com/ar	0800-333-3733	Argentina	
www.samsung.com/br	0800-121-421 4004-0000	Brazil	Latin America
www.samsung.com/cl	800-SAMSUNG (726-7864)	Chile	
www.samsung.com/latin	00-1800-5077267	Nicaragua	
www.samsung.com/latin	800-7919267	Honduras	
www.samsung.com/latin	0-800-507-7267	Costa Rica	
www.samsung.com/latin	1-800-10-7267	Ecuador	
www.samsung.com/latin	800-6225	El Salvador	
www.samsung.com/latin	1-800-299-0013	Guatemala	
www.samsung.com/latin	1-800-234-7267	Jamaica	
www.samsung.com/latin	800-7267	Panama	
www.samsung.com/latin	1-800-662-3180	Puerto Rico	
www.samsung.com/latin	1-800-751-2676	Rep. Dominica	
www.samsung.com/latin	1-800-SAMSUNG (726-7864)	Trinidad & Tobago	
www.samsung.com/latin	0-800-100-5303	Venezuela	
www.samsung.com.co	01-8000112112	Colombia	
www.samsung.com/be (Dutch)	02 201 2418	Belgium	Europe
www.samsung.com/be_fr (French)			
www.samsung.com/cz	800-SAMSUNG (800-726786)	Czech Republic	
www.samsung.com/dk	8-SAMSUNG (7267864)	Denmark	
www.samsung.com/fin	30-6227 515	Finland	
www.samsung.com/fr	01 4963 0000	France	
www.samsung.de	01805-SAMSUNG (726-7864 € 0,14/Min)	Germany	
www.samsung.com/hu	06-80-SAMSUNG (726-7864)	Hungary	
www.samsung.com/it	800-SAMSUNG (726-7864)	Italy	
www.samsung.com/lu	02 261 03 710	Luxembourg	
www.samsung.com/nl	0900-SAMSUNG (0900-7267864) (€ 0.10/Min)	Netherlands	
www.samsung.com/no	3-SAMSUNG (7267864)	Norway	
www.samsung.com/pl	0 801 1SAMSUNG (172678), 022-607-93-33	Poland	
www.samsung.com/pt	80820-SAMSUNG (726-7864)	Portugal	
www.samsung.com/sk	0800-SAMSUNG (726-7864)	Slovakia	
www.samsung.com/es	902-1-SAMSUNG (902 172 678)	Spain	
www.samsung.com/se	0771 726 7864 (SAMSUNG)	Sweden	
www.samsung.com/uk	0845 SAMSUNG (7267864)	U.K	
www.samsung.com/ie	0818 717 100	Eire	
www.samsung.com/at	0810-SAMSUNG (7267864, € 0.07/min)	Austria	
www.samsung.com/ch	0848-SAMSUNG (7267864, CHF 0.08/min)	Switzerland	
www.samsung.ru	8-800-555-55-55	Russia	CIS
www.samsung.com/kz_ru	8-10-800-500-55-500	Kazakhstan	
www.samsung.com/kz_ru	8-10-800-500-55-500	Uzbekistan	
	00-800-500-55-500	Kyrgyzstan	
	8-10-800-500-55-500	Tadjikistan	
www.samsung.ua	8-800-502-0000	Ukraine	
www.samsung.com/ua_ru			
	810-800-500-55-500	Belarus	
	00-800-500-55-500	Moldova	
www.samsung.com/lt	8-800-77777	Lithuania	
www.samsung.com/lv	8000-7267	Latvia	
www.samsung.com/ee	800-7267	Estonia	
www.samsung.com/au	1300 362 603	Australia	Asia Pacific
www.samsung.com/nz	0800 SAMSUNG (0800 726 786)	New Zealand	
www.samsung.com/cn	400-810-5858, 010-6475 1880	China	
www.samsung.com/hk	3698-4698	Hong Kong	
www.samsung.com/hk_en/			
www.samsung.com/in	3030 8282, 1800 110011, 1800 3000 8282	India	
www.samsung.com/id	0800-112-8888	Indonesia	
www.samsung.com/jp	0120-327-527	Japan	
www.samsung.com/my	1800-88-9999	Malaysia	
www.samsung.com/ph	1-800-10-SAMSUNG (726-7864), 1-800-3-SAMSUNG (726-7864), 1-800-8-SAMSUNG (726-7864), 02-5805777	Philippines	
www.samsung.com/sg	1800-SAMSUNG (726-7864)	Singapore	
www.samsung.com/th	1800-29-3232, 02-689-3232	Thailand	
www.samsung.com/hw	0800-329-999	Taiwan	
www.samsung.com/vn	1 800 588 889	Vietnam	
www.samsung.com/tr	444 7 77 11	Turkey	Middle East & Africa
www.samsung.com/za	0860-SAMSUNG (726-7864)	South Africa	
www.samsung.com/ae	800-SAMSUNG (726-7864), 8000-4726	U.A.E	